

Assembly Instruction






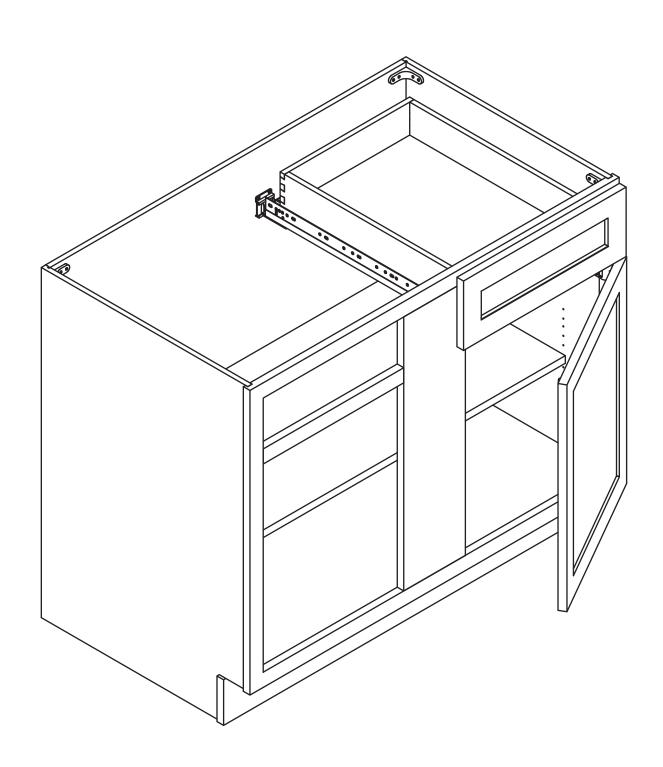

Base Blind Corner Cabinet

Item Code: BBC39L/R, BBC42L/R

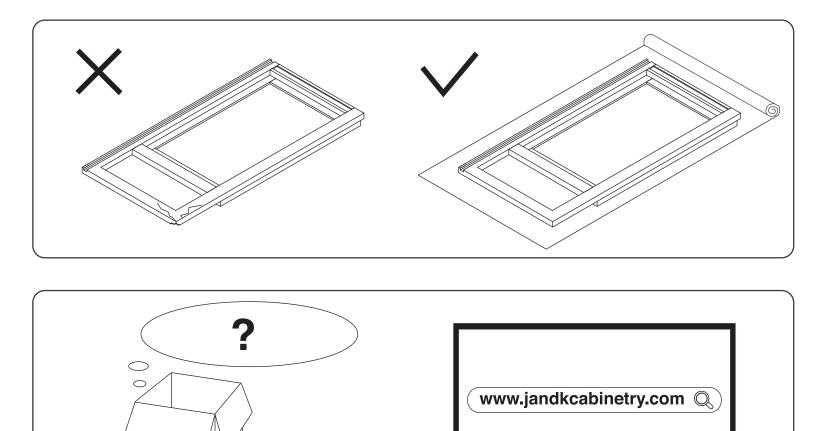



WARNING:


- 1. Please be careful when opening the box with boxcutter and/or blade.
- 2. J&K Cabinetry is not responsible for any injuries and/or damages incurred during cabinet assembly.



SERVICE:

During the installation process, if you encounter any problems, please go to our official website: www.jandkcabinetry.com, check the full version assembly instruction or watch the assembly video online.

Included Items:

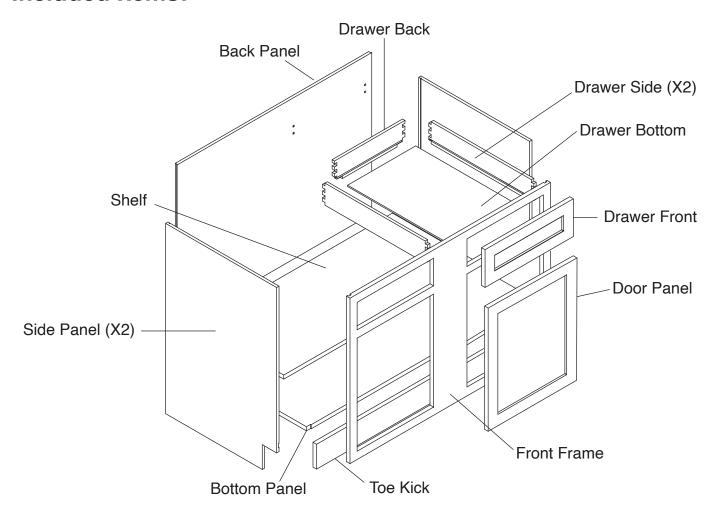

| 0000 | 1/2" | 19/32" | 1-3/16" | 11/16" | 0 | | | | | |
|----------------------------|----------------|----------------|---------------|---------------|-------------------------------|----------------|---------------|--|--------------------------|------------------------------------|
| 90° Brackets X 4 | Screws X 14 | Screws X 16 | Screws X 8 | Screws X 2 | Door Bumpers X 6 | Shelf Pins X 4 | Hinges X 2 | Under Mount Drawer Glide Kit X 1 | Glide Supports X 2 | Glide Locking Kit X 1 |

Recommended Tools:







Rubber Mallet

Compressor





Screw Driver



Senco Fastener

Safety Tools:




Eye Wear




Gloves

Step 2: Step 1: Wood Glue Step 3: Step 4: Senco Fastener


Step 5:

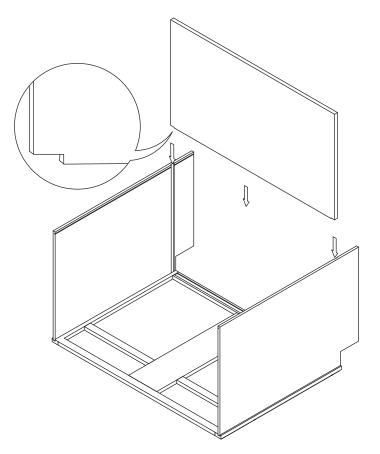


Step 6:

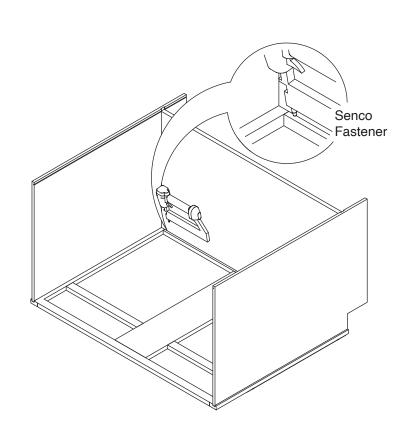


Step 7:

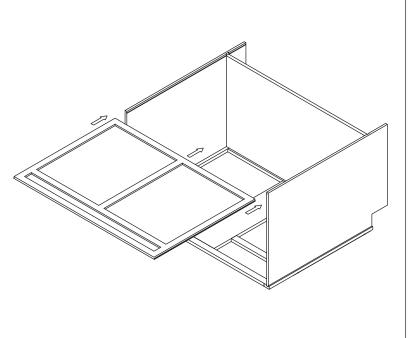


Step 8:

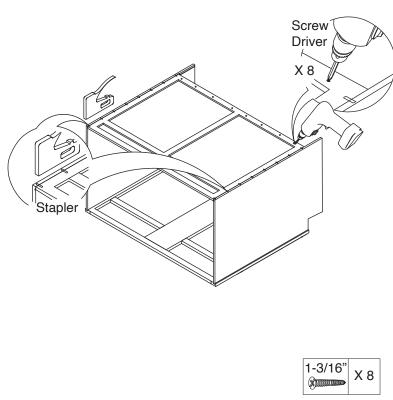

Step 9:

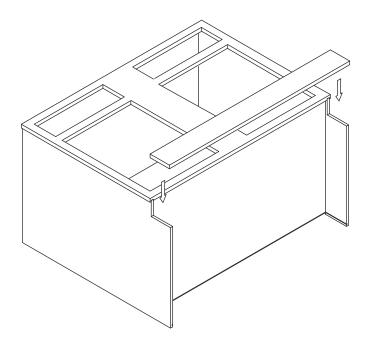


Step 10:

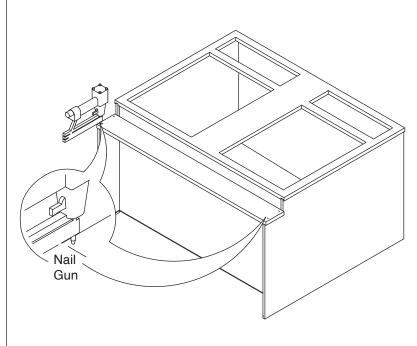


Step 11:


X 4

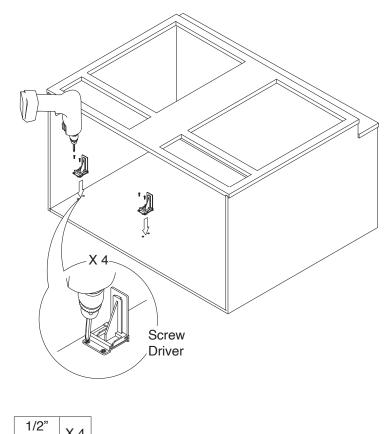


Step 12:

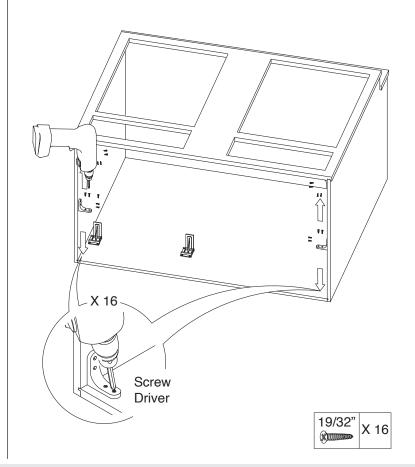


Step 13:

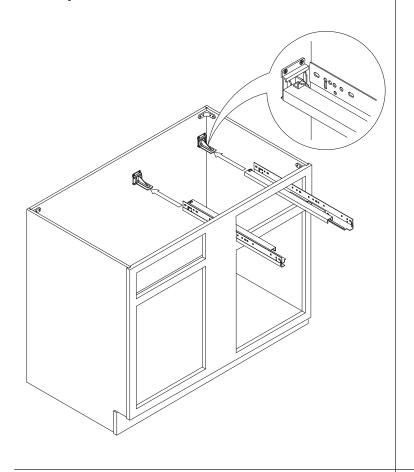


Step 14:

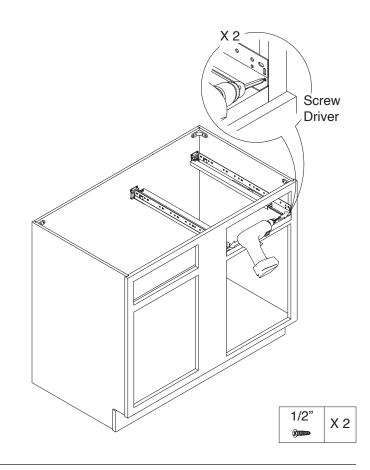



Step 15:

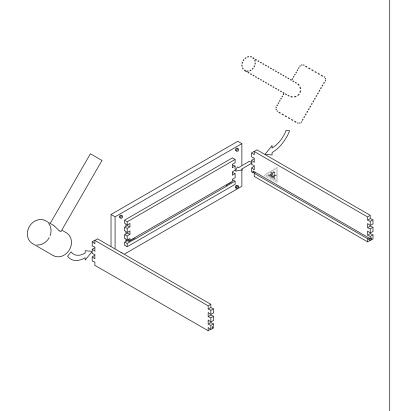



Step 16:

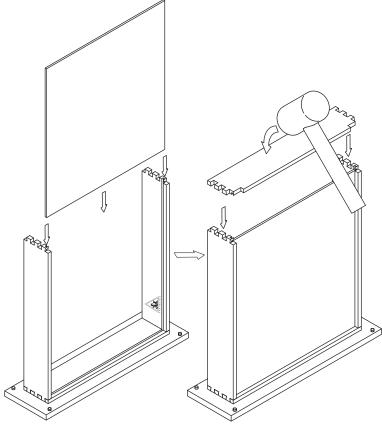

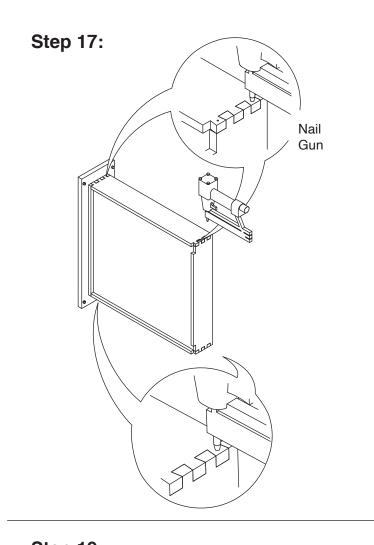


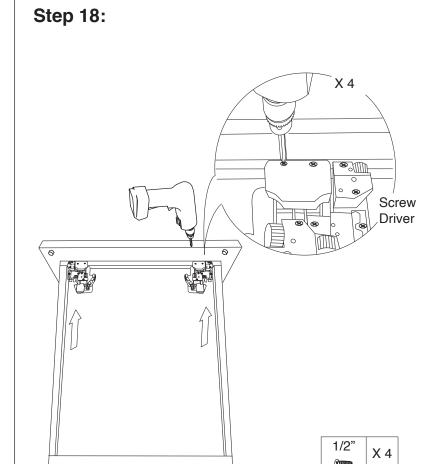

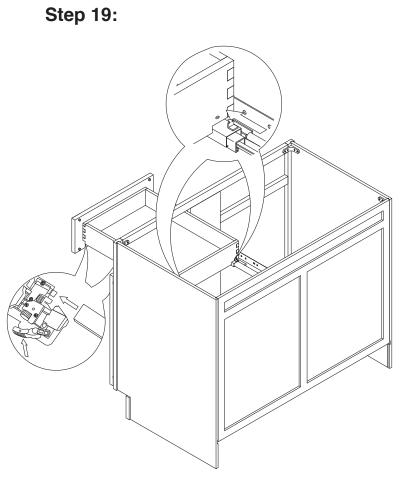

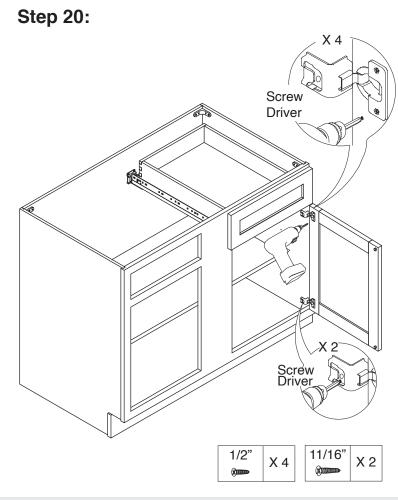

Step 21:

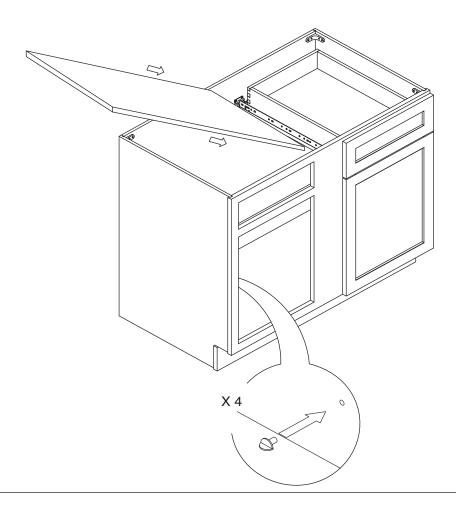

Step 22:

