

# **Assembly Instruction**







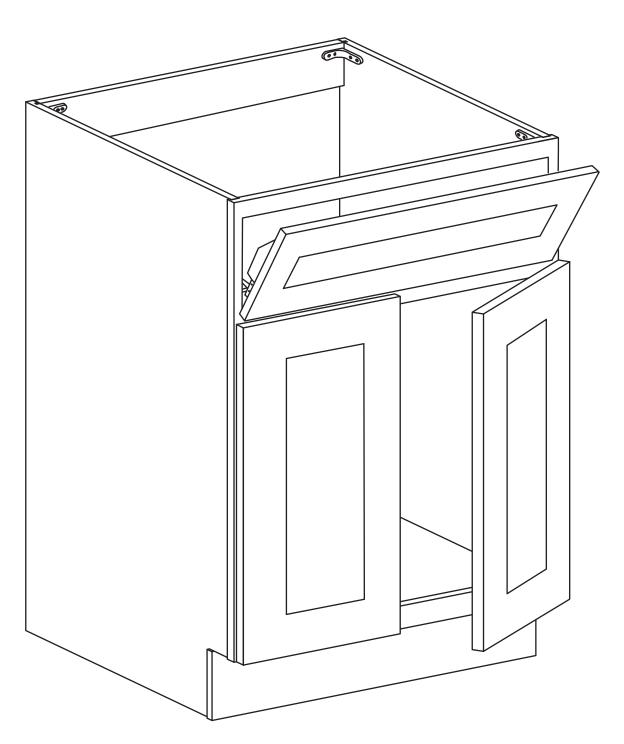

## **Vanity Sink Cabinet**

Item Code: FA2421, FA3021, FA3621

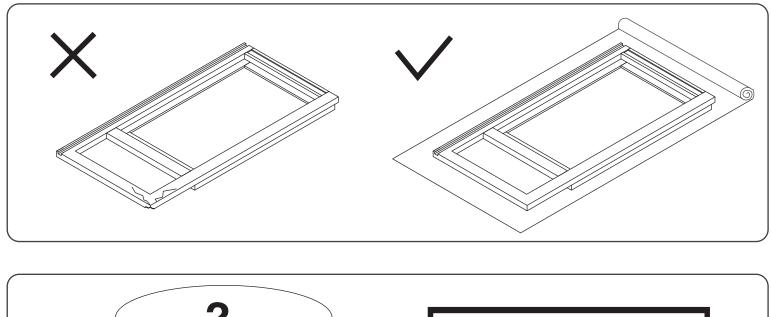

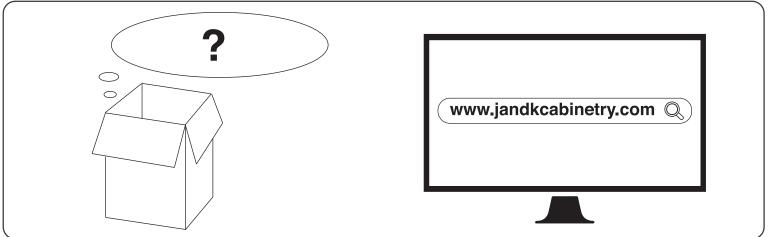



## WARNING:


- 1. Please be careful when opening the box with boxcutter and/or blade.
- 2. J&K Cabinetry is not responsible for any injuries and/or damages incurred during cabinet assembly.



# **SERVICE:**

During the installation process, if you encounter any problems, please go to our official website: www.jandkcabinetry.com, check the full version assembly instruction or watch the assembly video online.

#### **Included Items:**

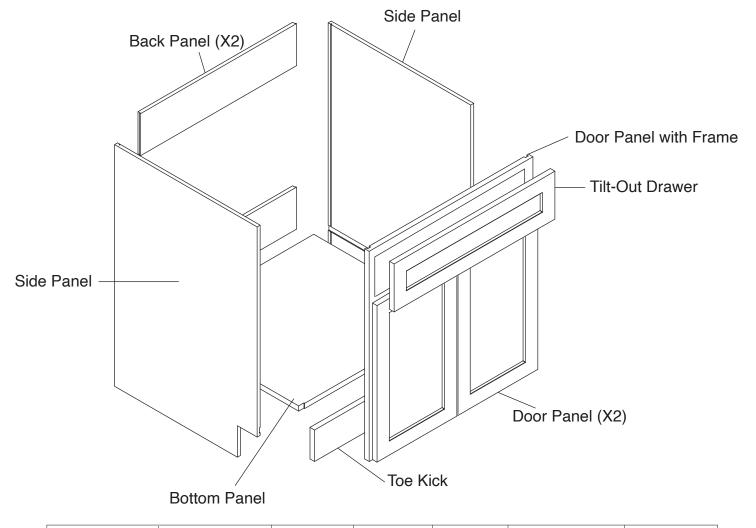

	(0000)	1/2"	19/32"	1-3/16"	0	
Tray	90° Brackets	Screws	Screws	Screws	Door Bumpers	Hinges
<b>X 1</b>	<b>X 4</b>	X 10	X 16	X 4	<b>X 8</b>	X 2

#### **Recommended Tools:**



Screw Driver





Rubber Mallet Compressor







Senco Fastener

### **Safety Tools:**




Eye Wear




Gloves


Step 1:

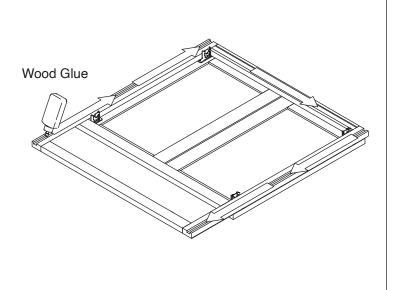


Step 2:

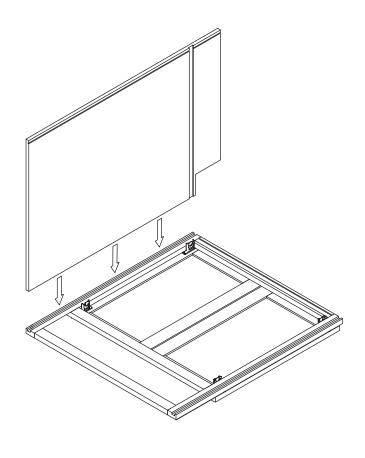


Step 3:

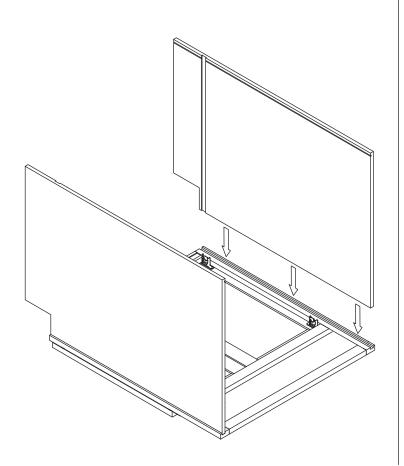


Step 4:

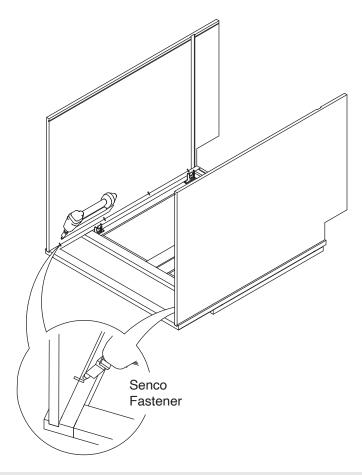


Step 5:

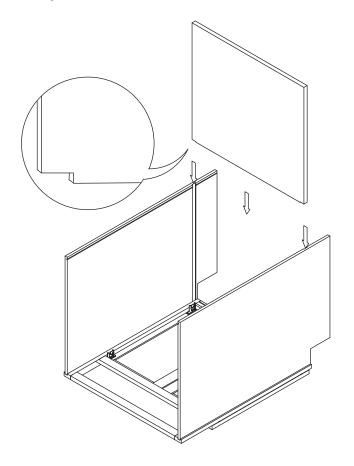


Step 6:

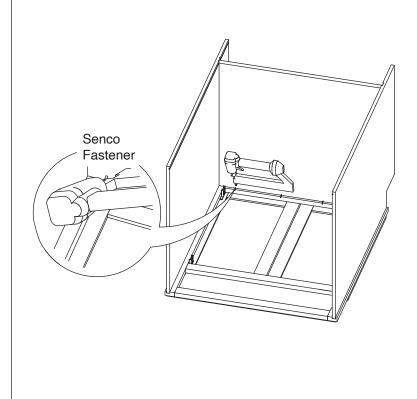


Step 7:

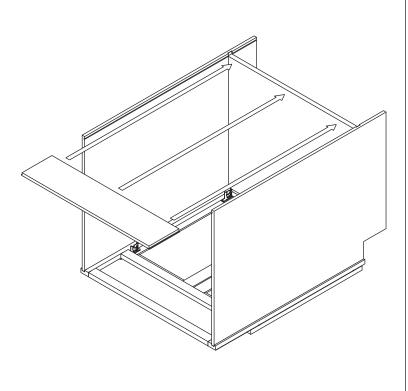


Step 8:

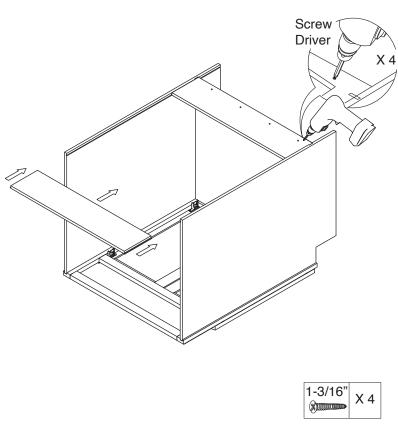


Step 9:

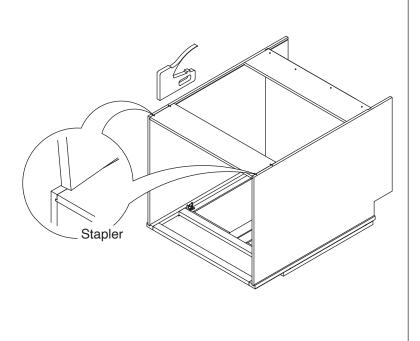


**Step 10:** 

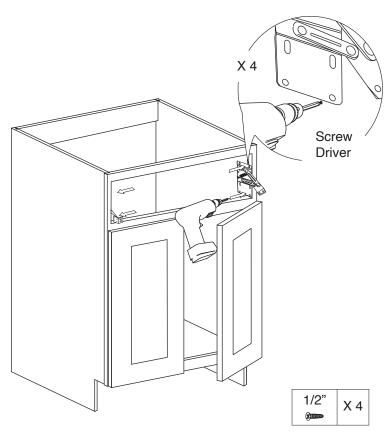


Step 11:

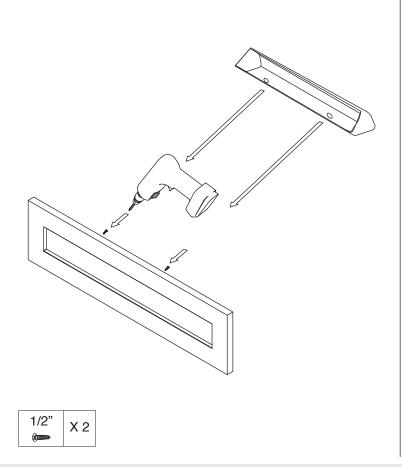


Step 12:

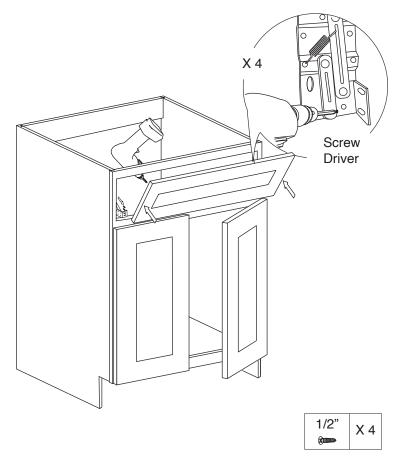


Step 13:

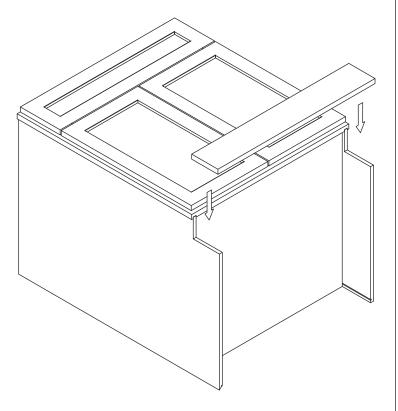

Step 14:

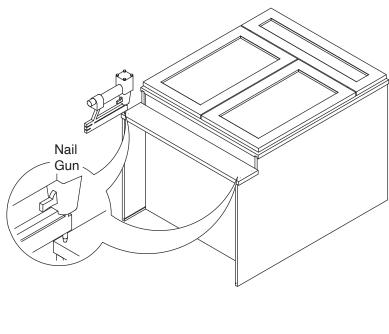

Step 15:

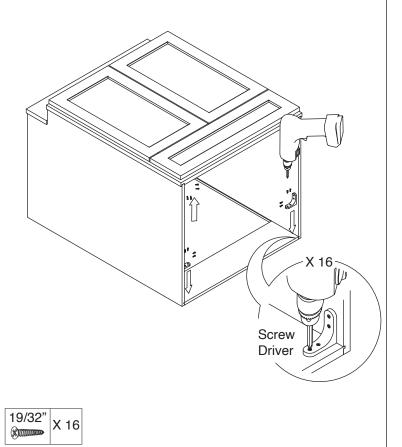

**Step 16:** 

