
Assembly Instruction

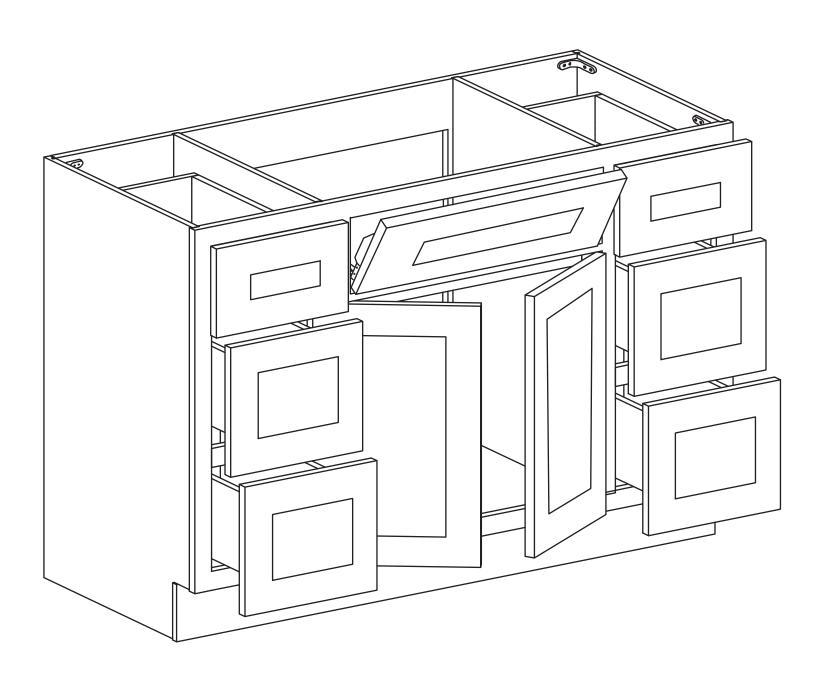






Vanity Single-Sink Combo

Item Code: FA4821D, FA6021D

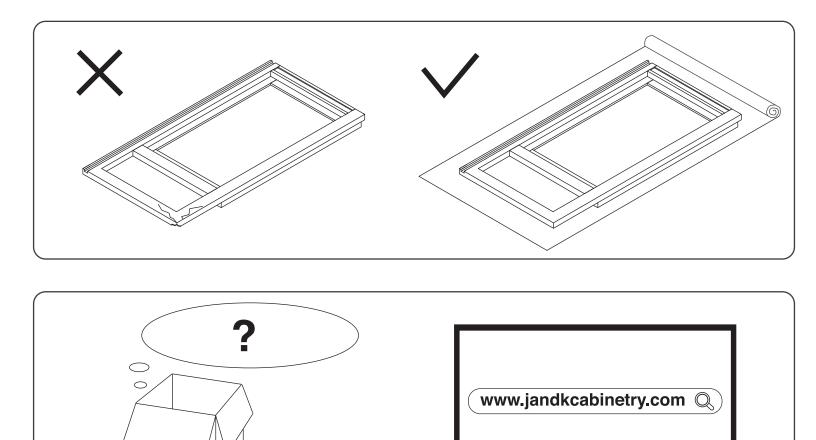




WARNING:

- 1. Please be careful when opening the box with boxcutter and/or blade.
- 2. J&K Cabinetry is not responsible for any injuries and/or damages incurred during cabinet assembly.




SERVICE:

During the installation process, if you encounter any problems, please go to our official website: www.jandkcabinetry.com, check the full version assembly instruction or watch the assembly video online.

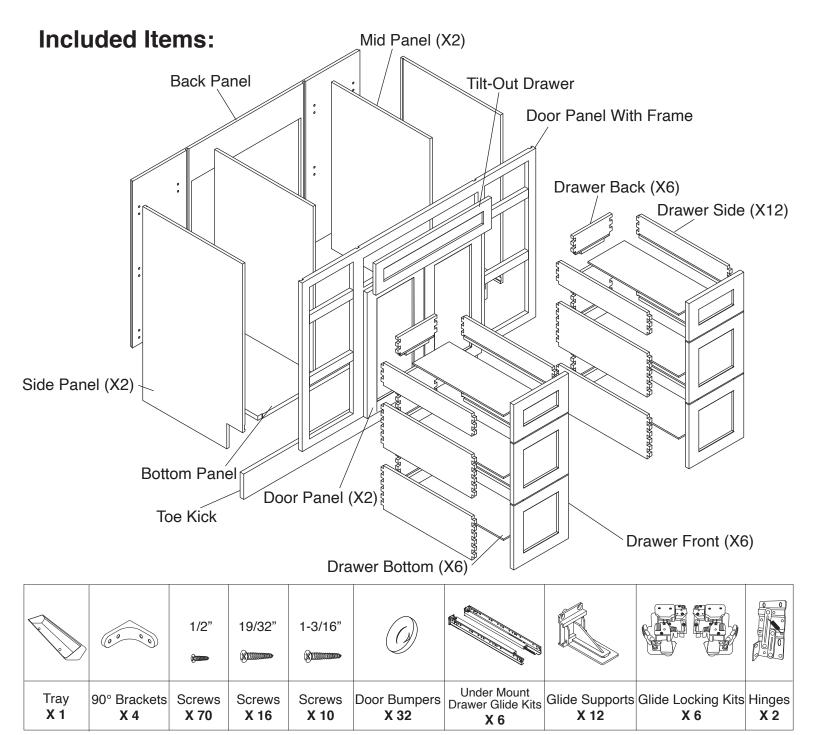

Recommended Tools:

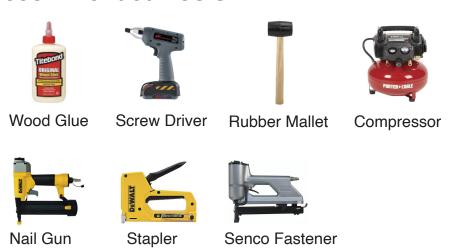

Safety Tools:



Eye Wear




Gloves


Step 1: Step 2: Wood Glue Step 3: Step 4:

Senco Fastener


Step 5:

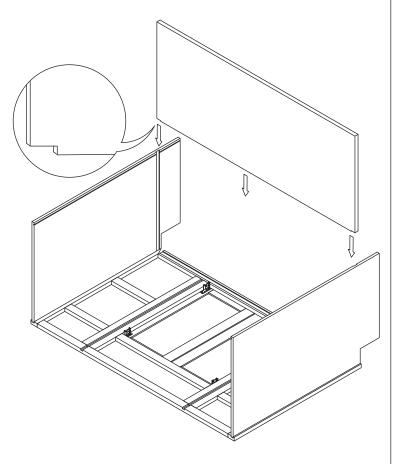


Step 6:

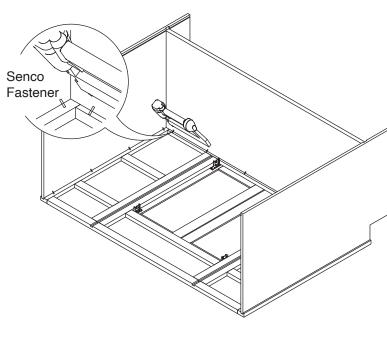


Step 7:

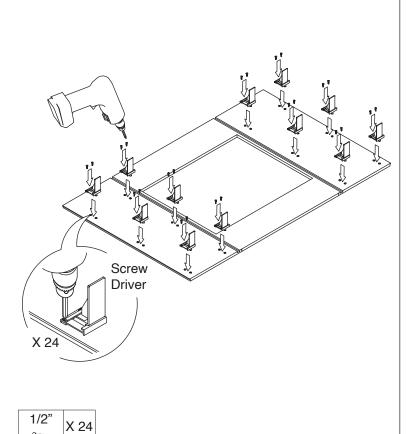


Step 8:

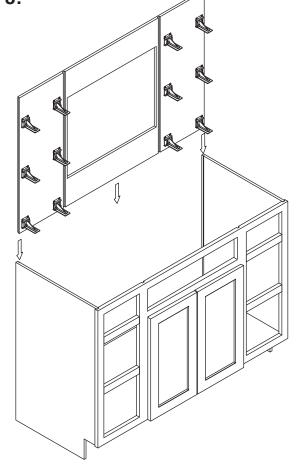


Step 9:

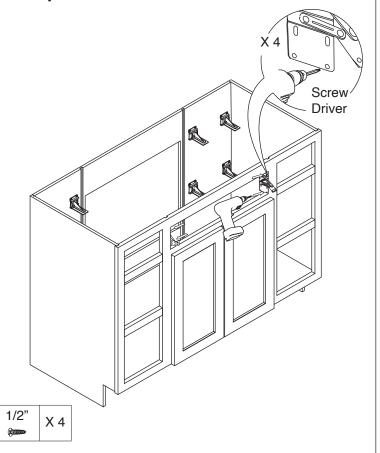


Step 10:

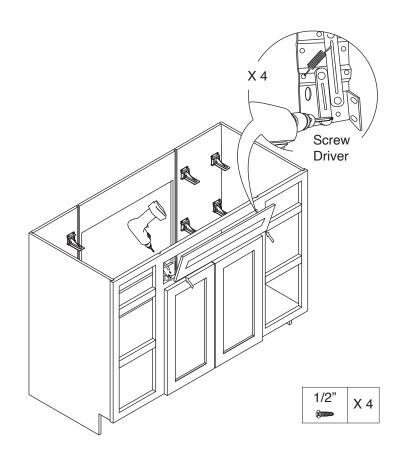


Step 11:

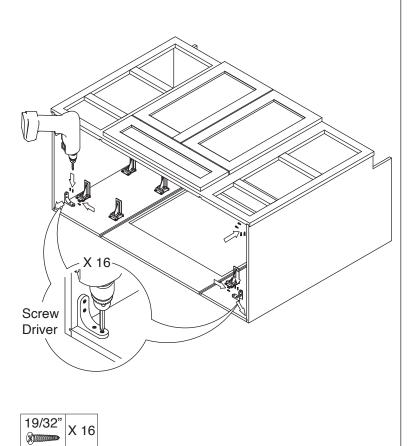


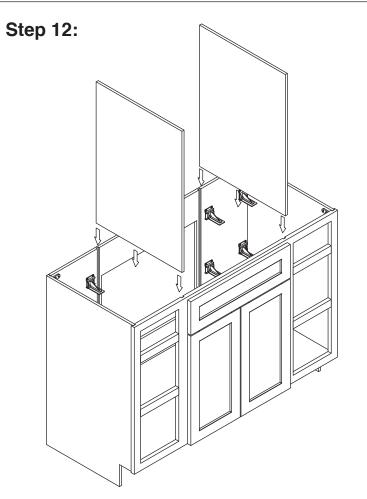


Step 13:

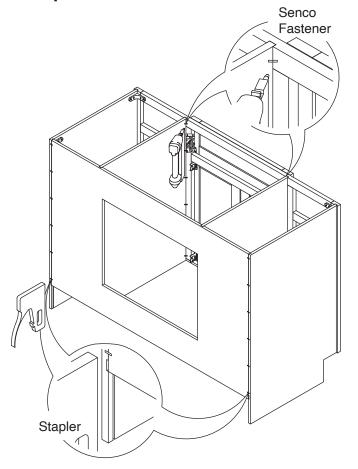


Step 14:

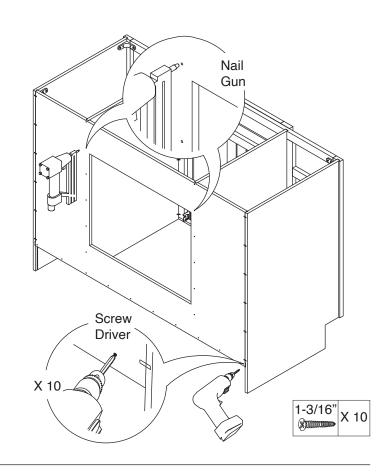


Step 15:

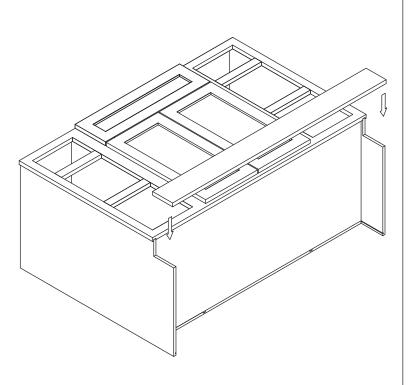


Step 16:

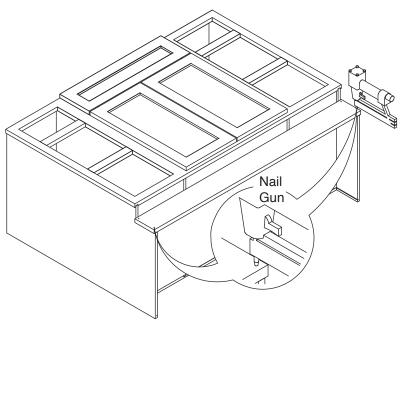


Step 17:

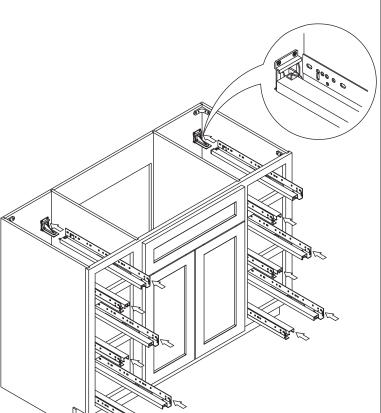


Step 18:

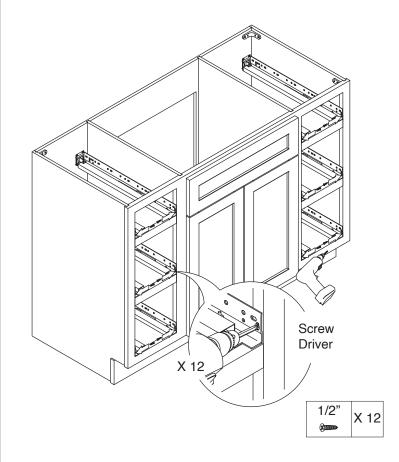


Step 19:

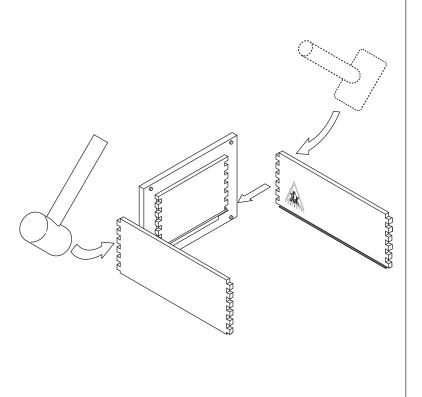


Step 20:

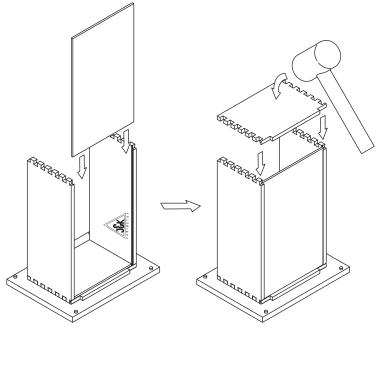


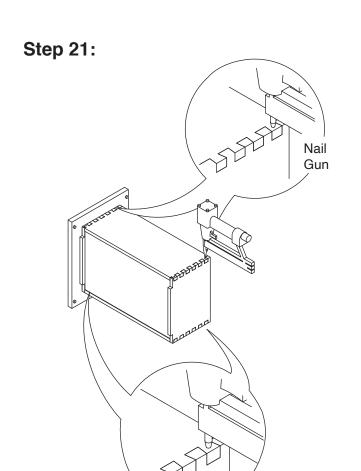




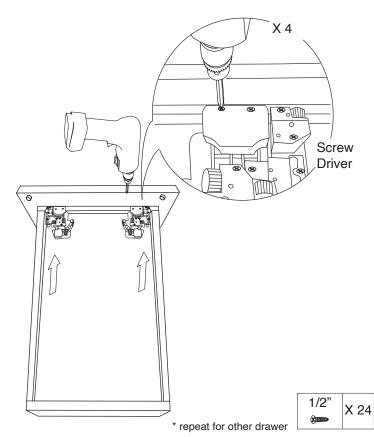

Step 23:

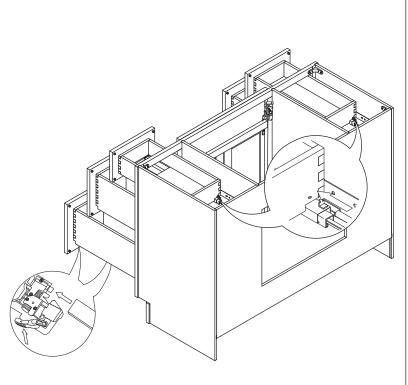

Step 24:

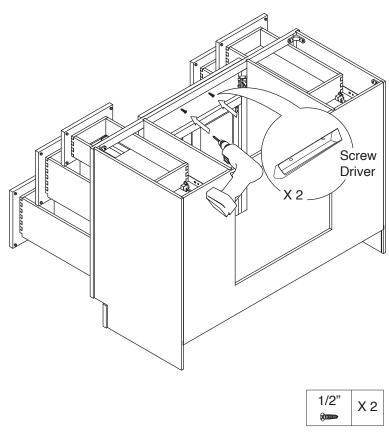

Step 25:

