
# **Assembly Instruction**




2020 Edition

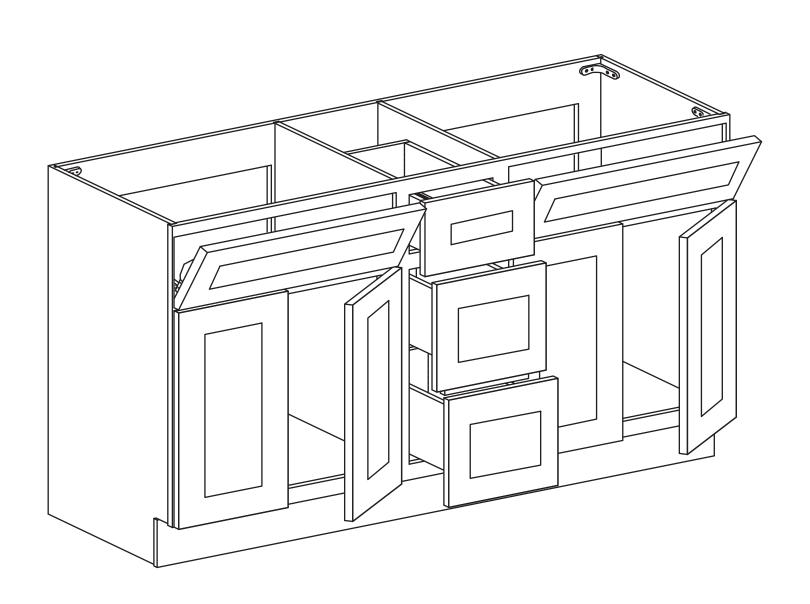

**Vanity Double-Sink Combo** 

Item Code: FA6021DD

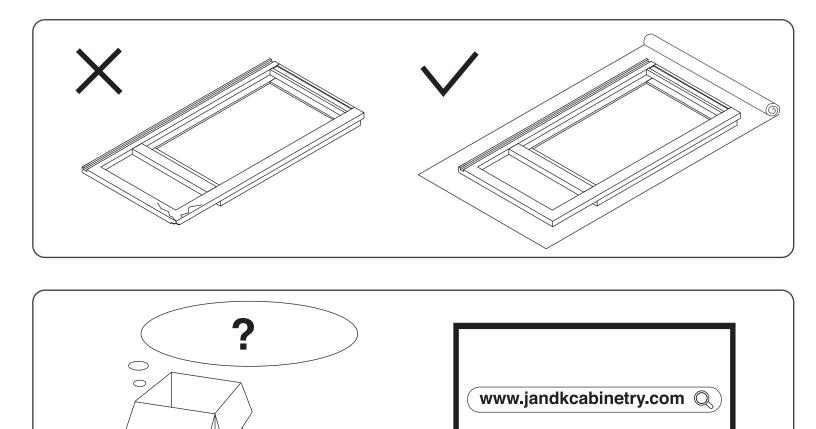





- 1. Please be careful when opening the box with boxcutter and/or blade.
- 2. J&K Cabinetry is not responsible for any injuries and/or damages incurred during cabinet assembly.

## SERVICE:

During the installation process, if you encounter any problems, please go to our official website: www.jandkcabinetry.com, check the full version assembly instruction or watch the assembly video online.

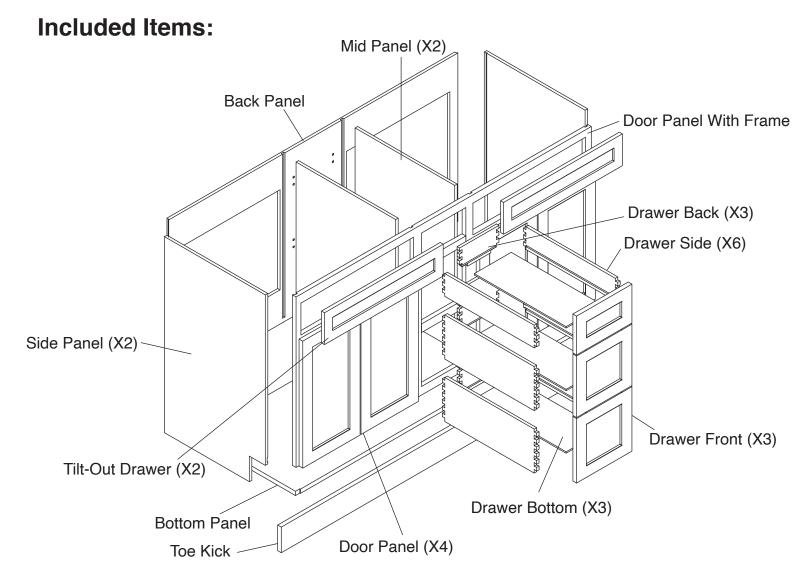

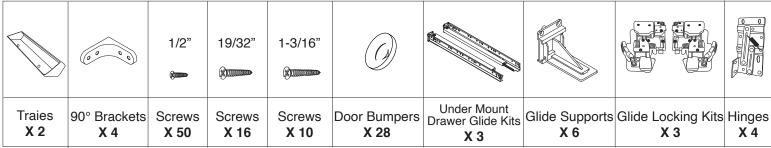

### **Recommended Tools:**



Screw Driver



Rubber Mallet



Compressor







Senco Fastener

### **Safety Tools:**



Eye Wear




Gloves

Step 1: Step 2: Wood Glue Step 3: Step 4: Senco Fastener


Step 5:


Step 6:


Step 8:

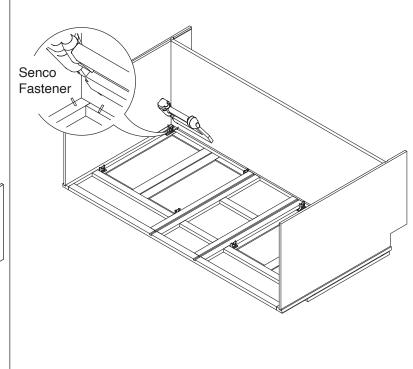


Step 7:

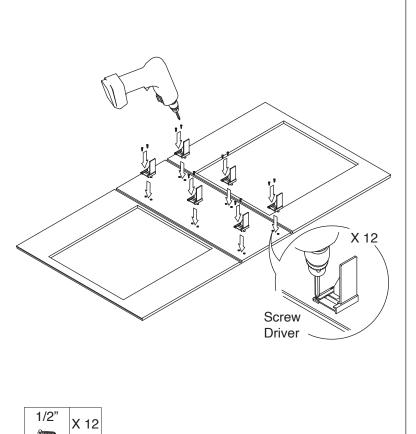

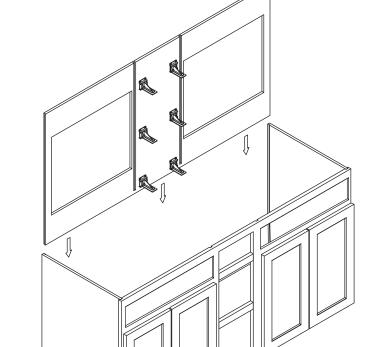

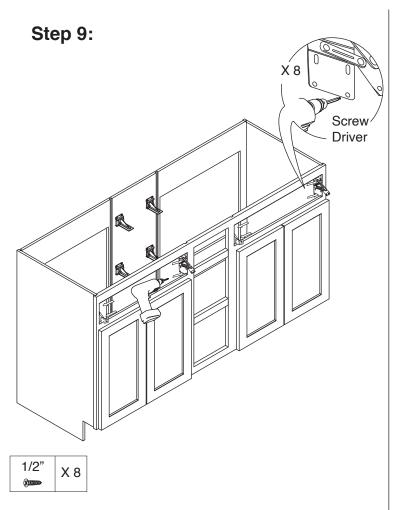


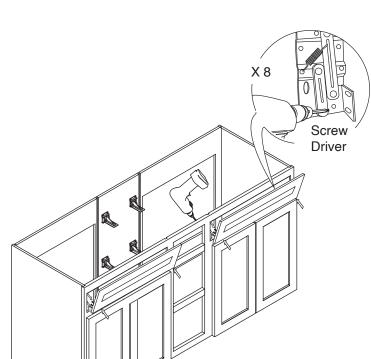


1/2"

X 8

Step 10:

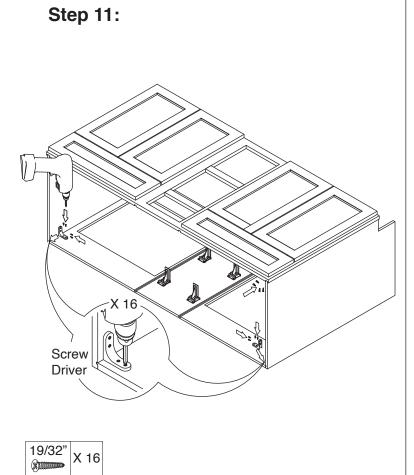

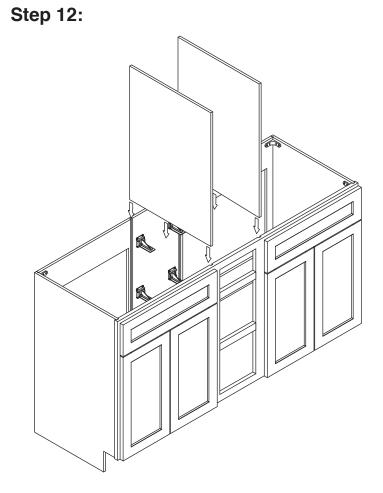


Copyrights © 2020 J&K International Group, LLC. All Rights Reserved.

Step 13:


Senco
Fastener

Stapler


Step 14:

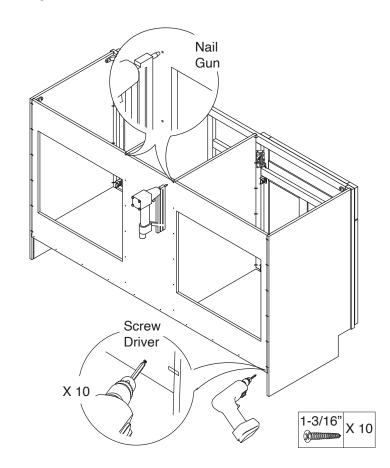


**Step 15:** 

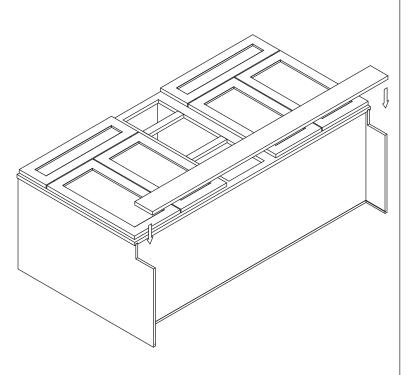


Step 16:

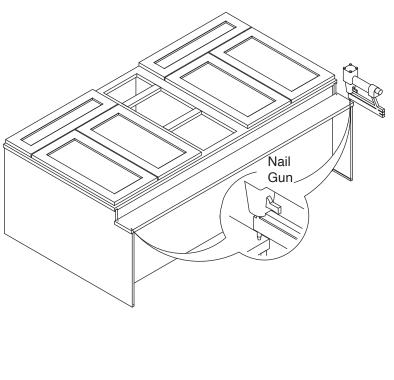


Step 17:

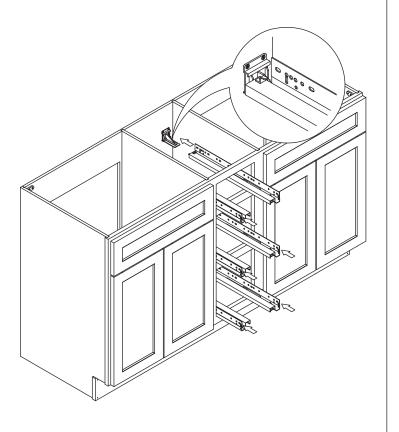


Step 18:

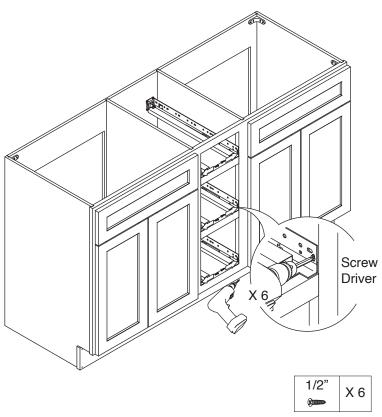


Step 19:

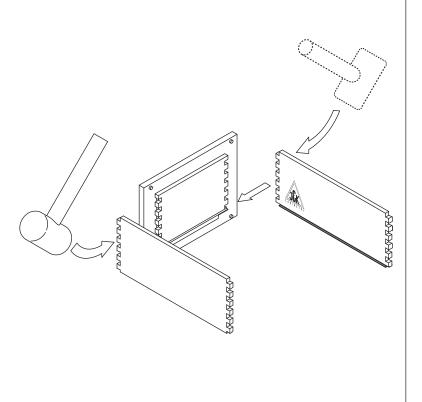


Step 20:

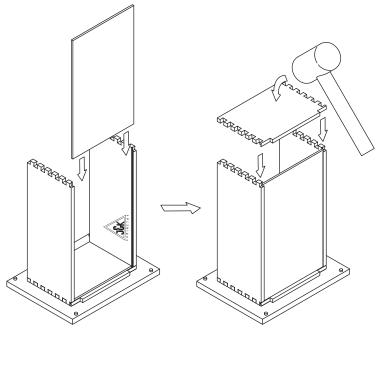


Step 21:

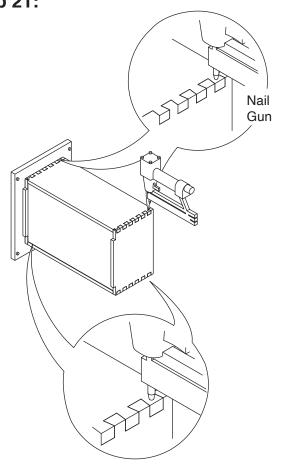


Step 22:

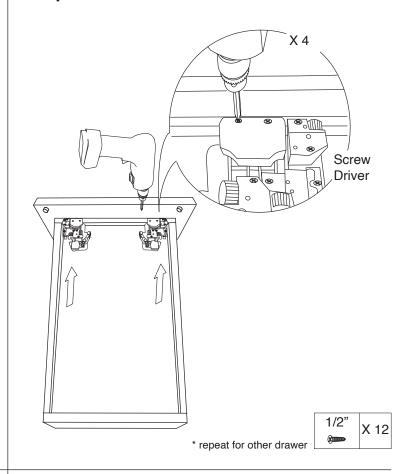

Step 23:

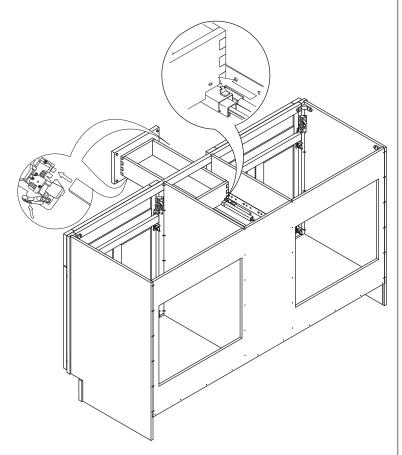

Step 24:

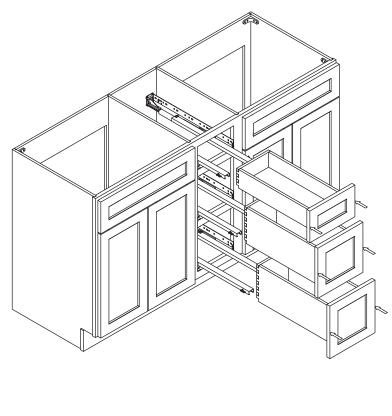


Copyrights © 2020 J&K International Group, LLC. All Rights Reserved.

# Screw Driver



### Step 26:

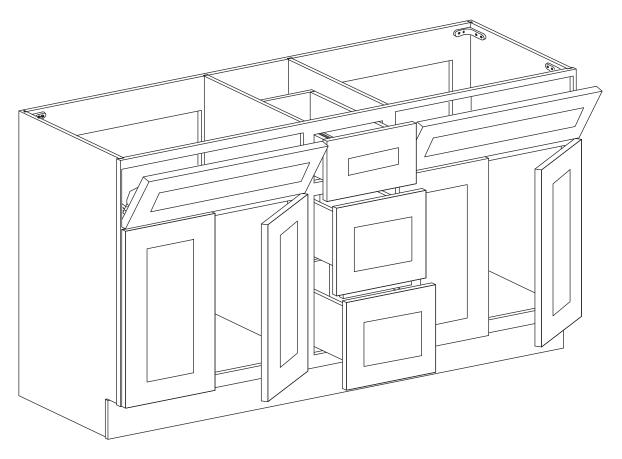

Copyrights © 2020 J&K International Group, LLC. All Rights Reserved.