




# Assembly Instruction

2020 Edition

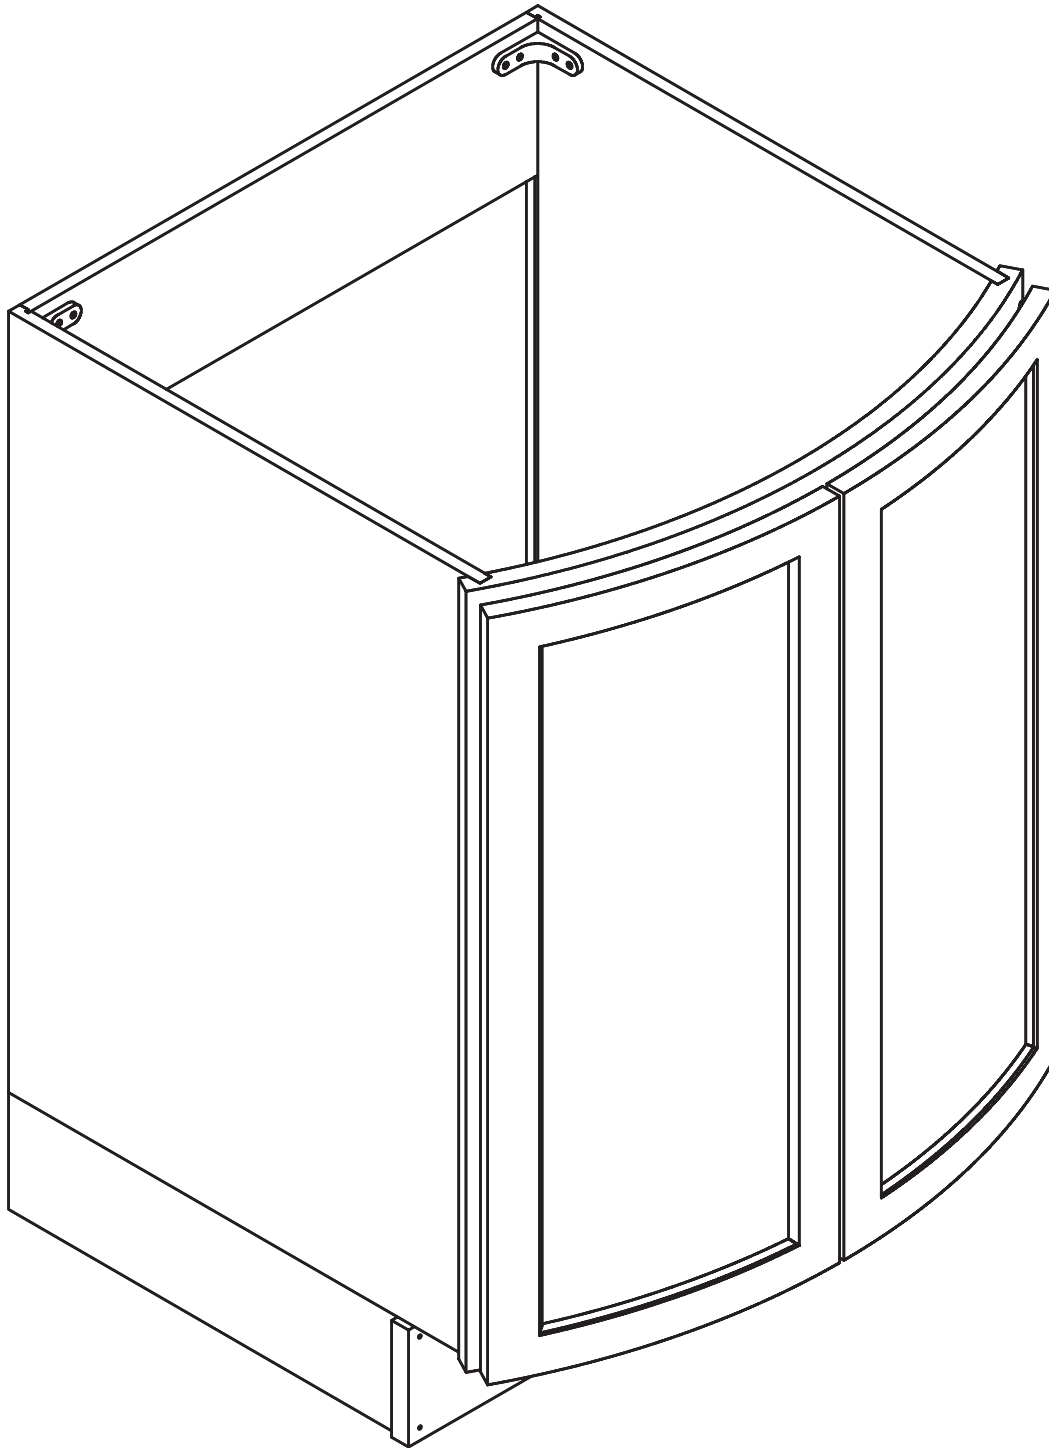

**Vanity Sink Cabinet Curved Door**

Item Code:  
FSVA24

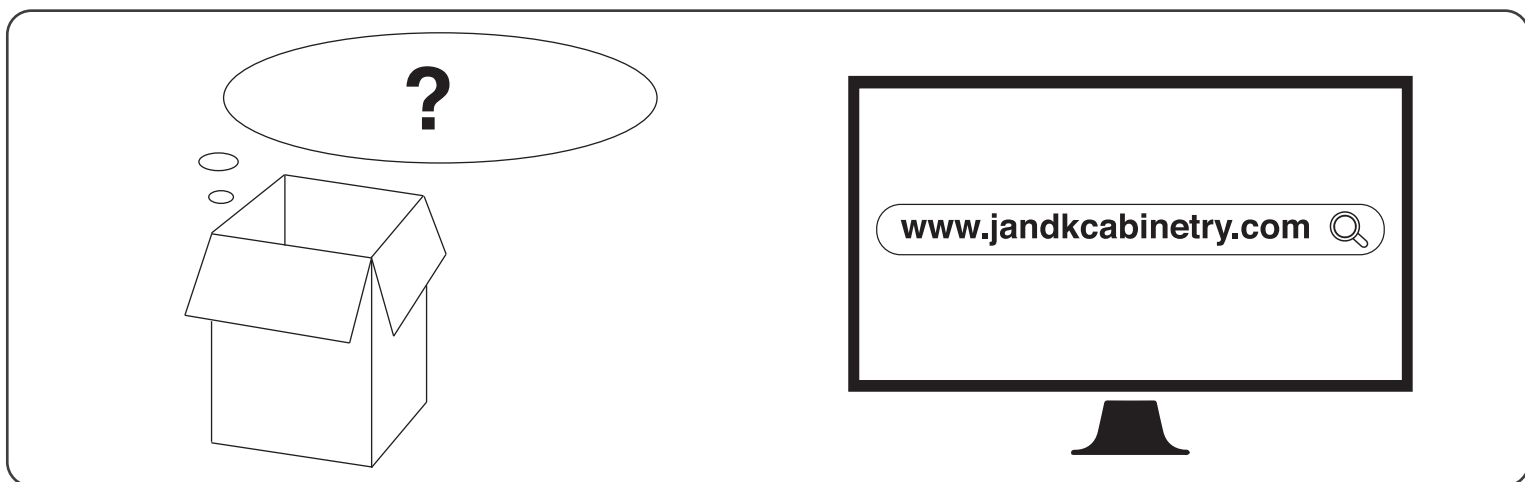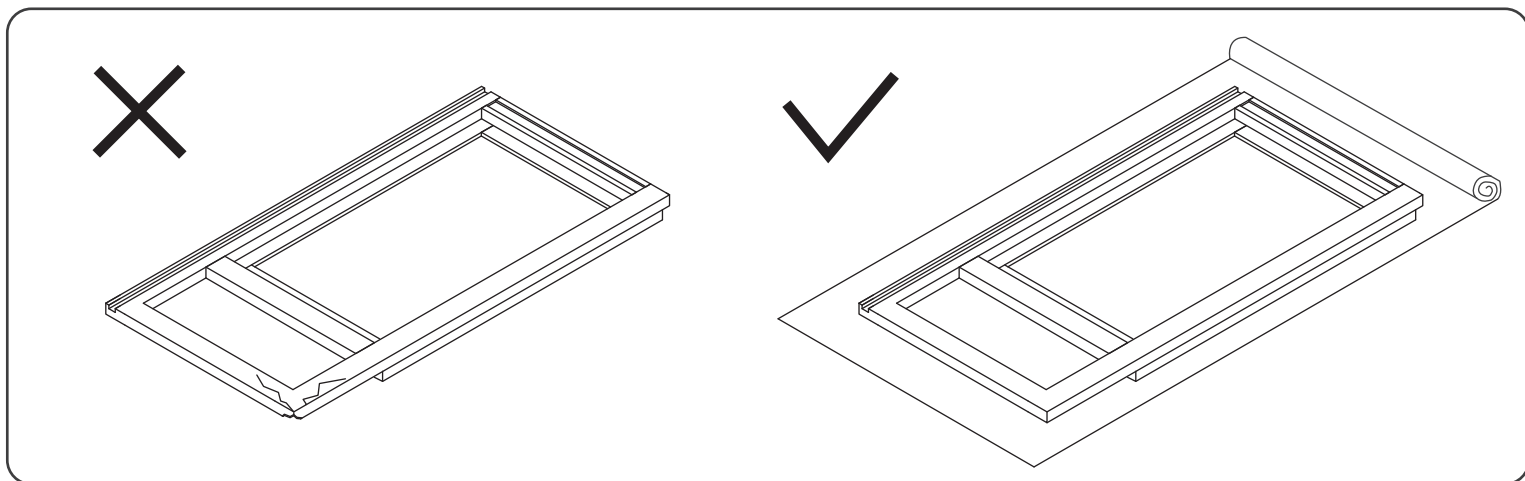

## **WARNING:**


1. Please be careful when opening the box with boxcutter and/or blade.
2. J&K Cabinetry is not responsible for any injuries and/or damages incurred during cabinet assembly.





## **SERVICE:**

During the installation process, if you encounter any problems, please go to our official website: [www.jandkcabinetry.com](http://www.jandkcabinetry.com), check the full version assembly instruction or watch the assembly video online.

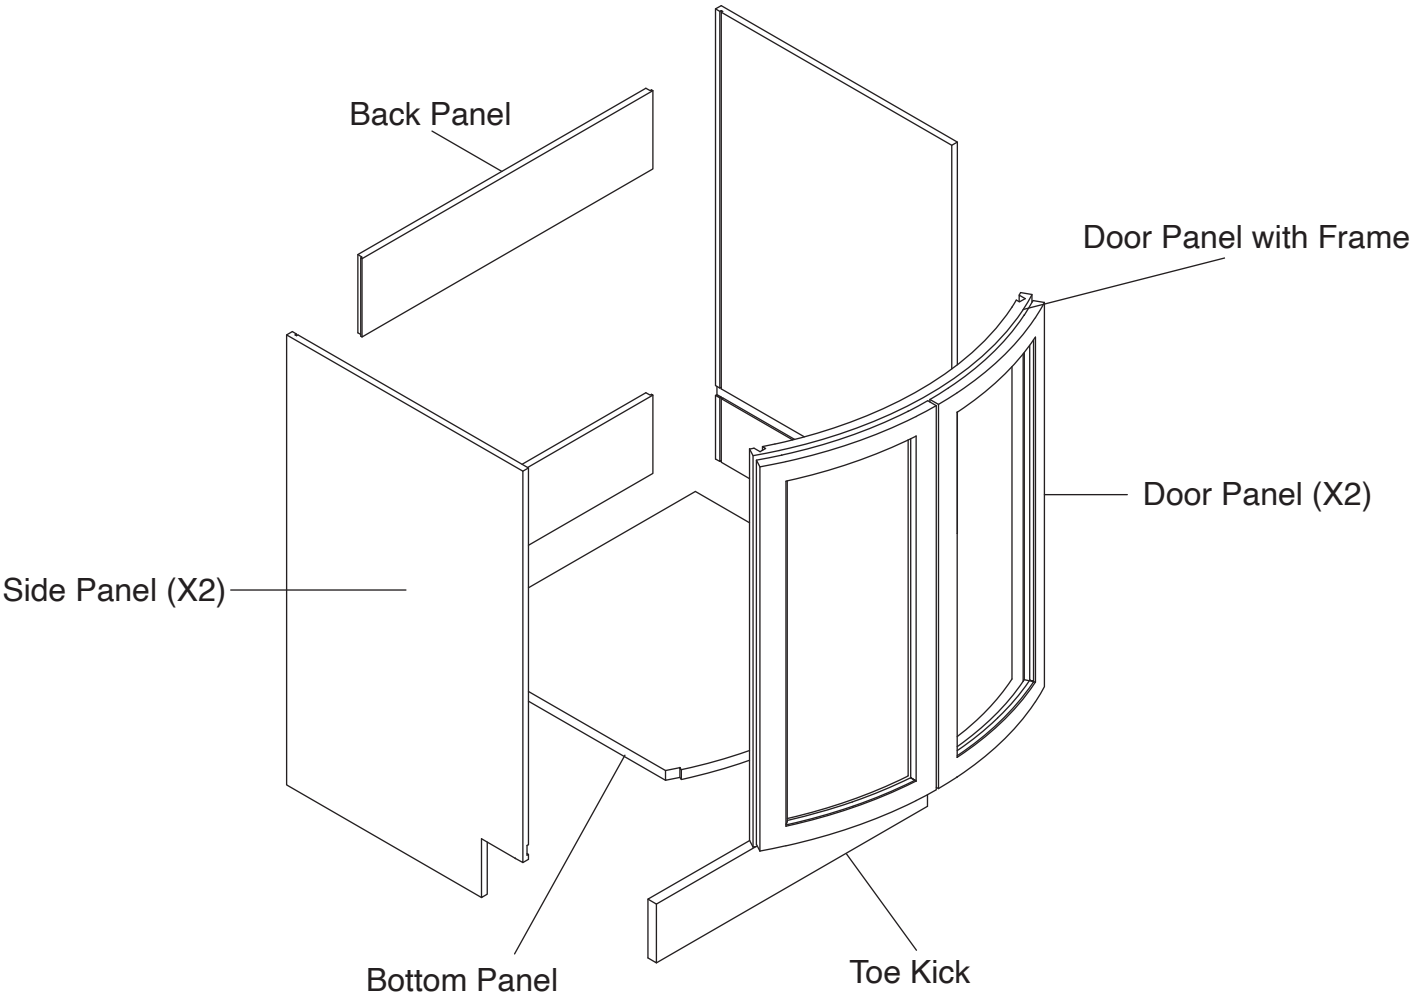Included Items:



	19/32"	1-3/16"	
90° Brackets X 2	Screws X 8	Screws X 3	Door Bumpers X 4

Recommended Tools:




Wood Glue



Screw Driver



Rubber Mallet



Compressor



Nail Gun



Stapler



Senco Fastener

Safety Tools:




Eye Wear




Gloves


### Step 1:

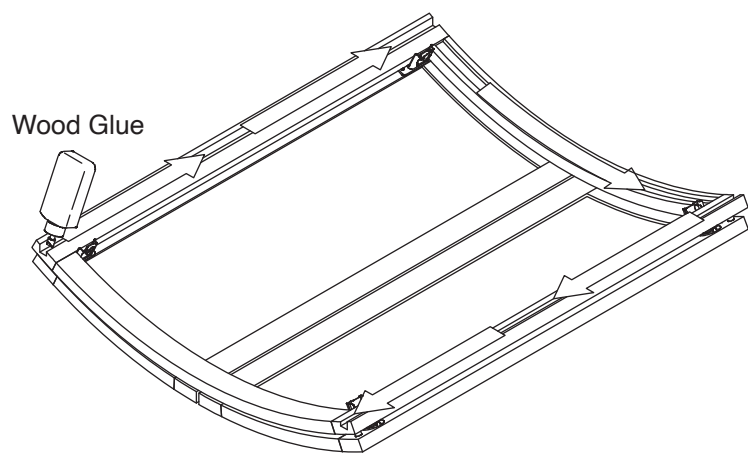


### Step 2:

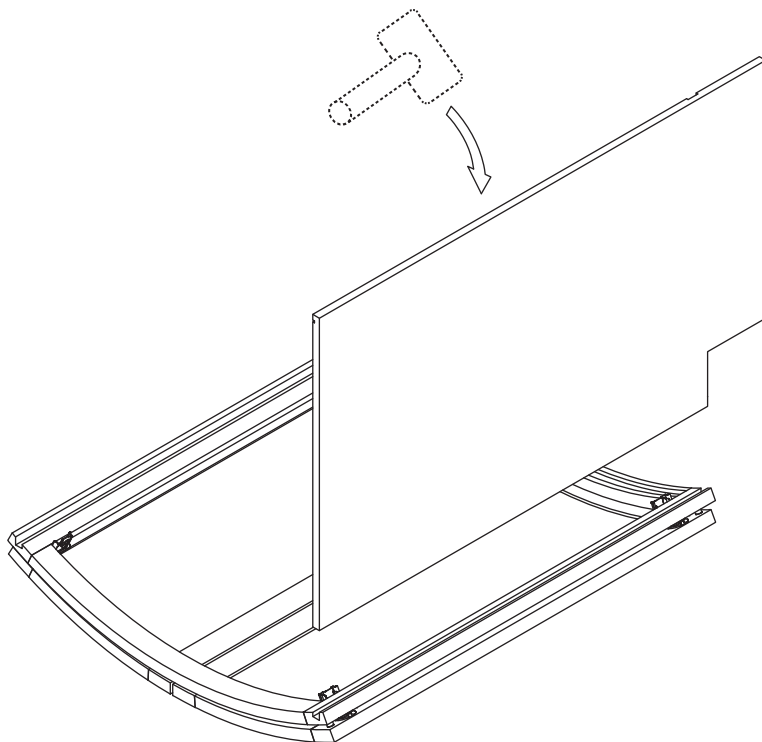

### Step 3:

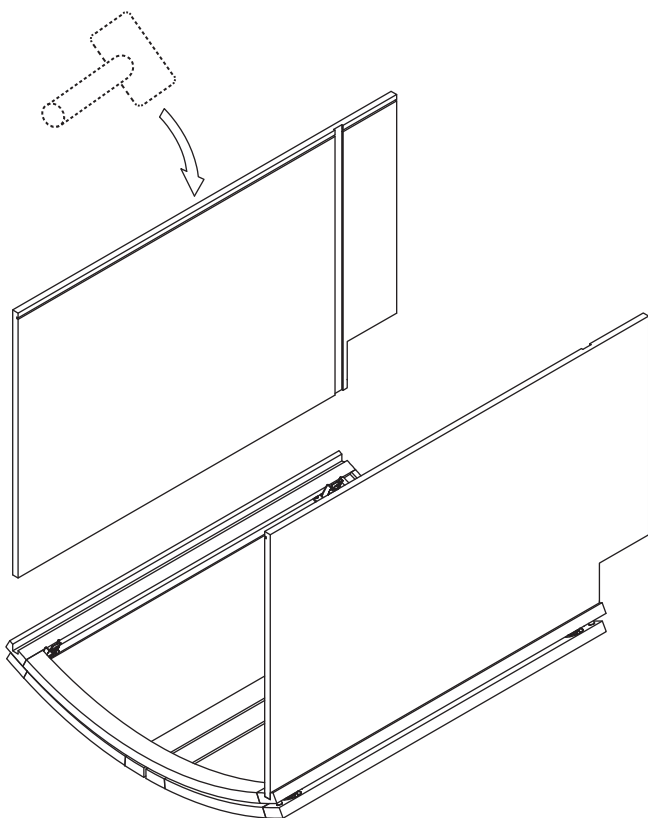


### Step 4:

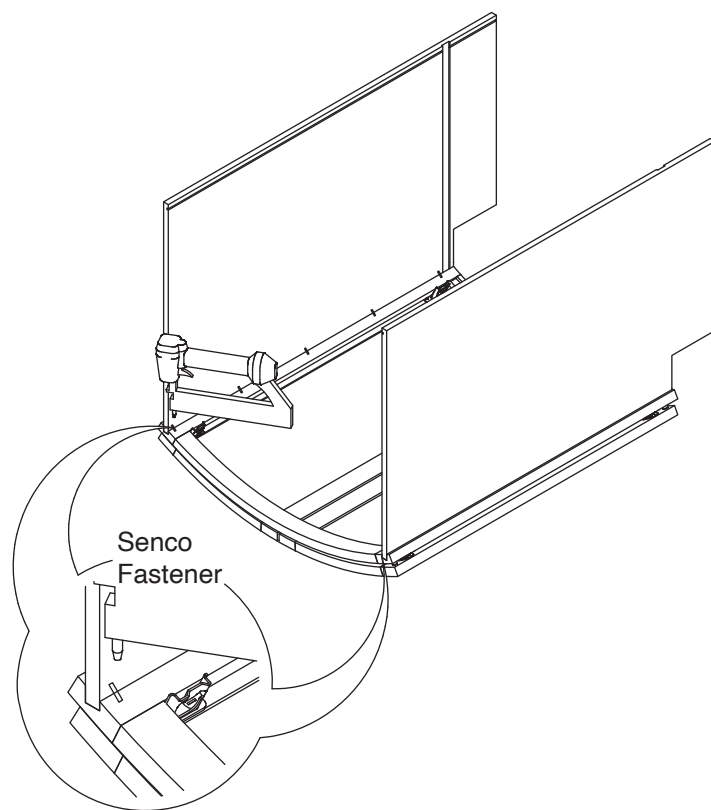





### Step 5:

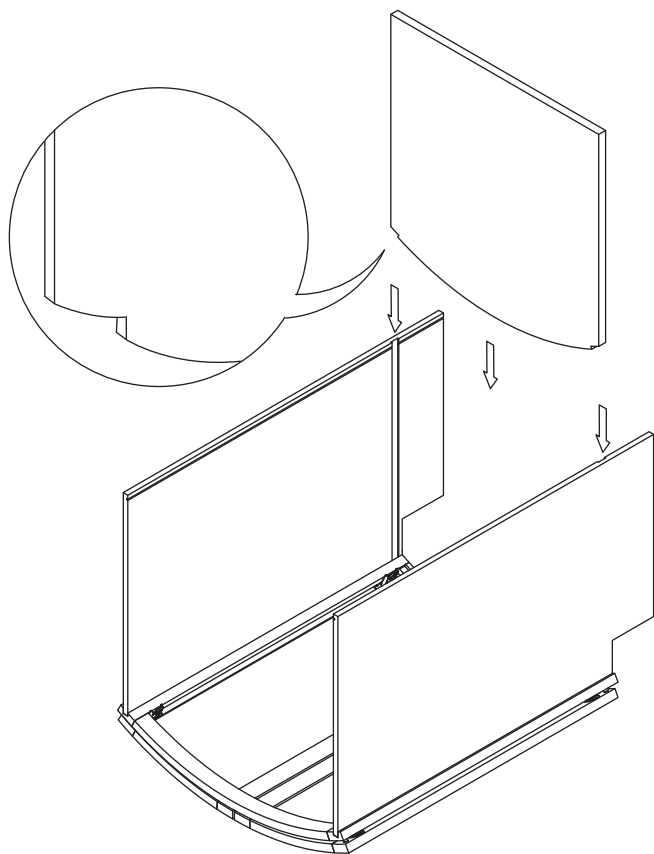



### Step 6:

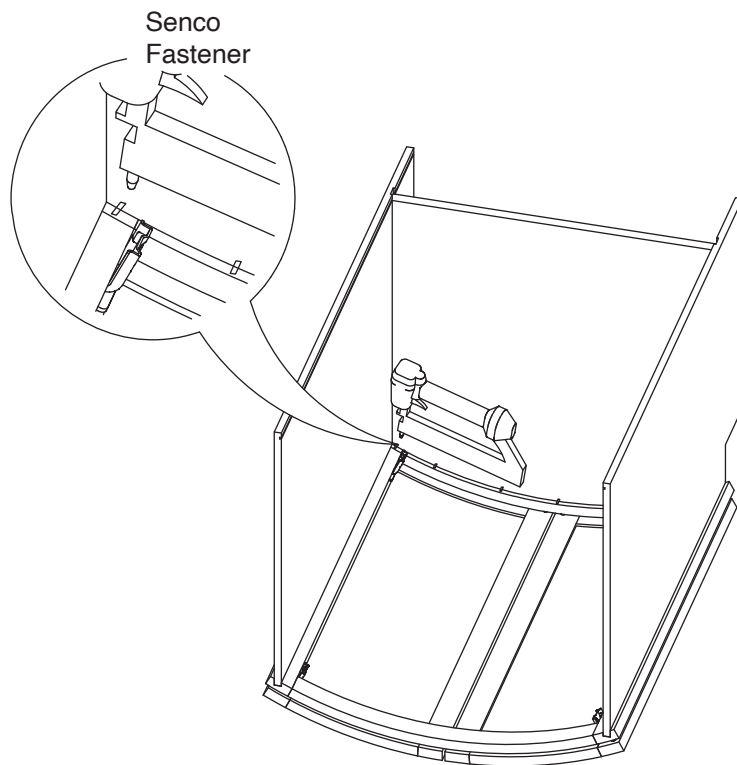


### Step 7:

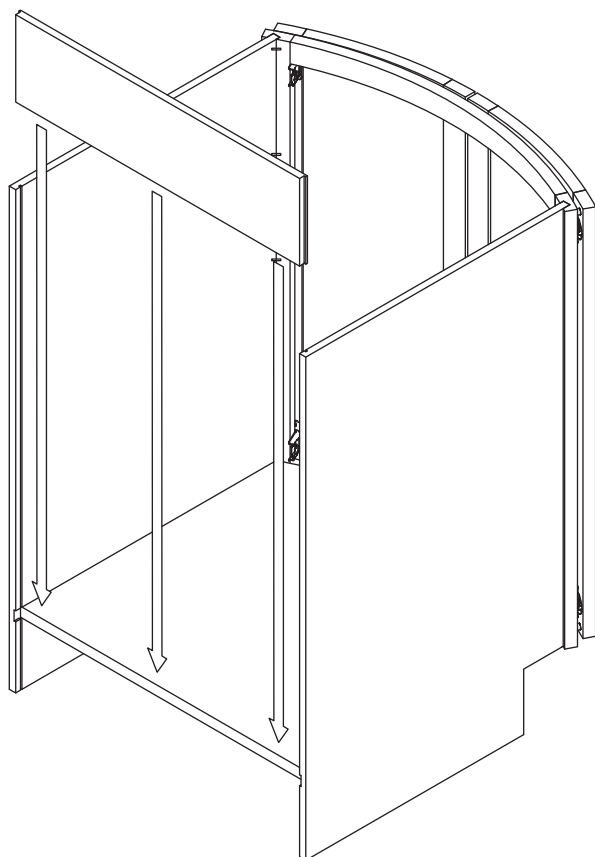


### Step 8:

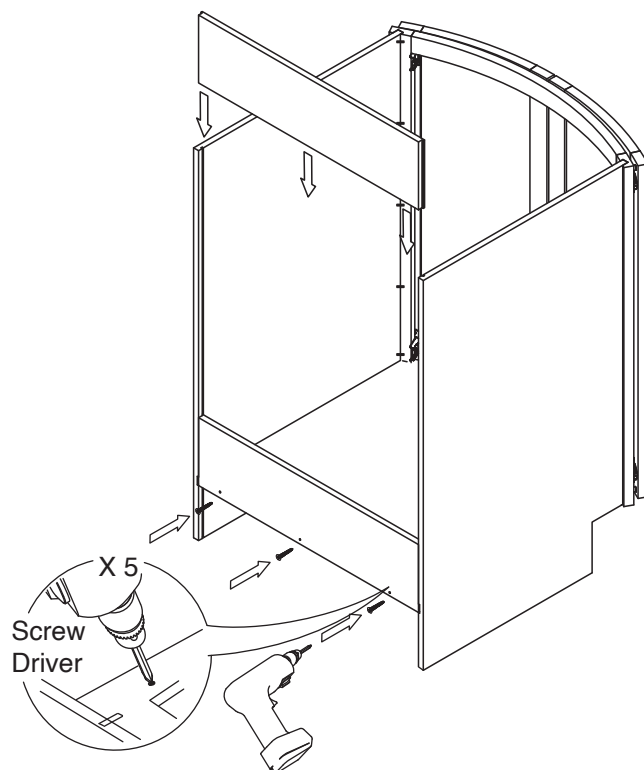


### Step 9:

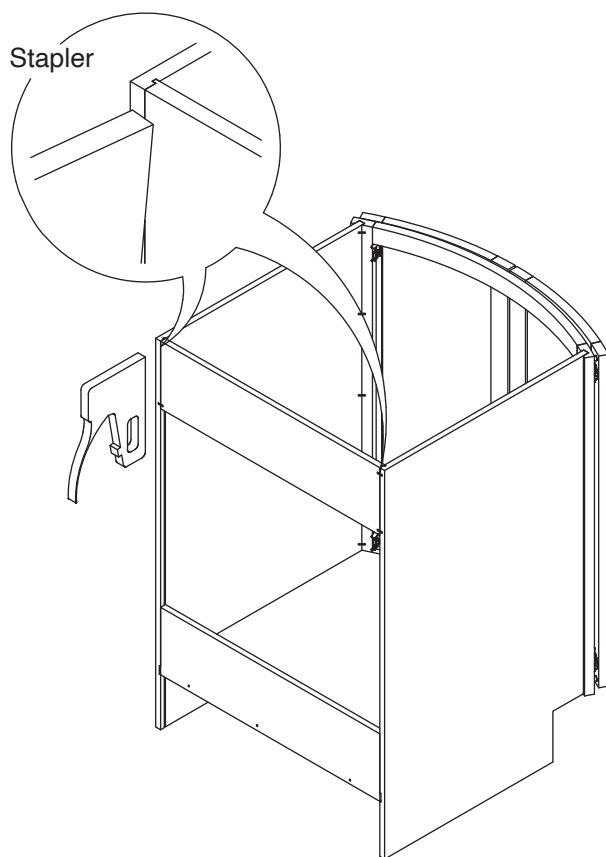



### Step 10:

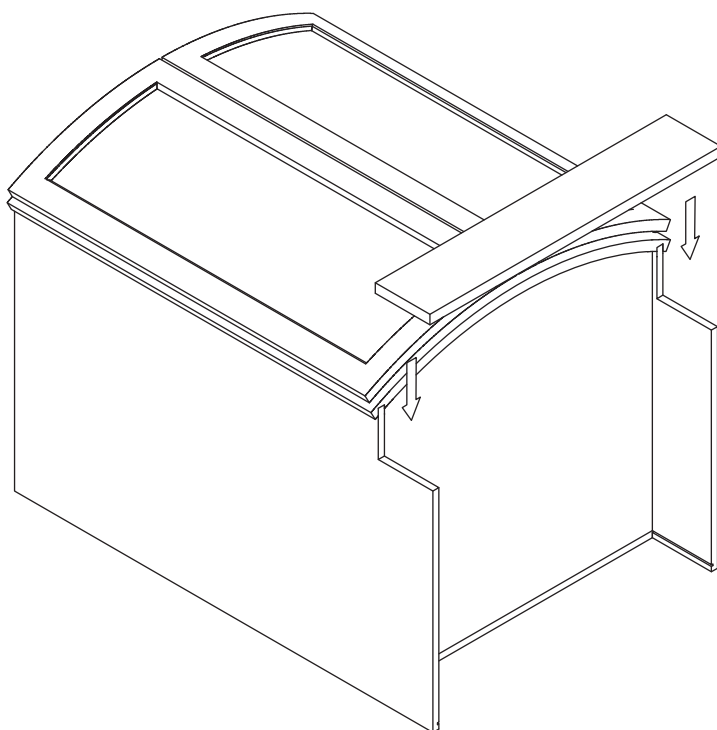

### Step 11:

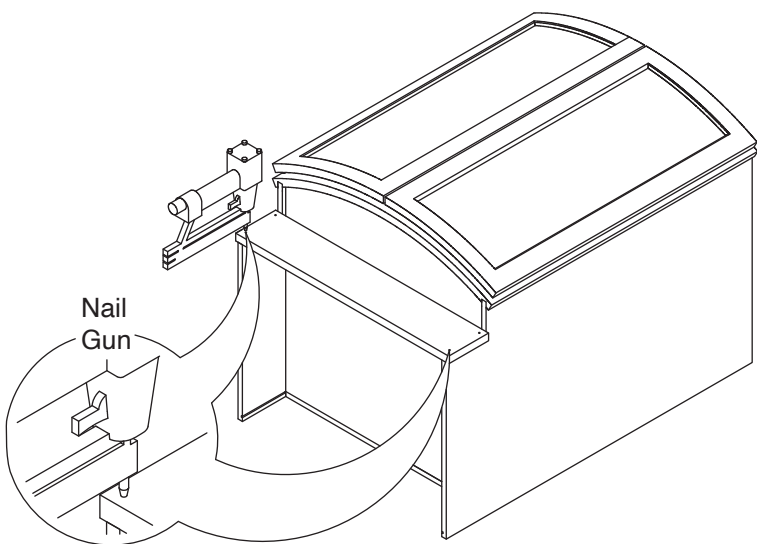

### Step 12:

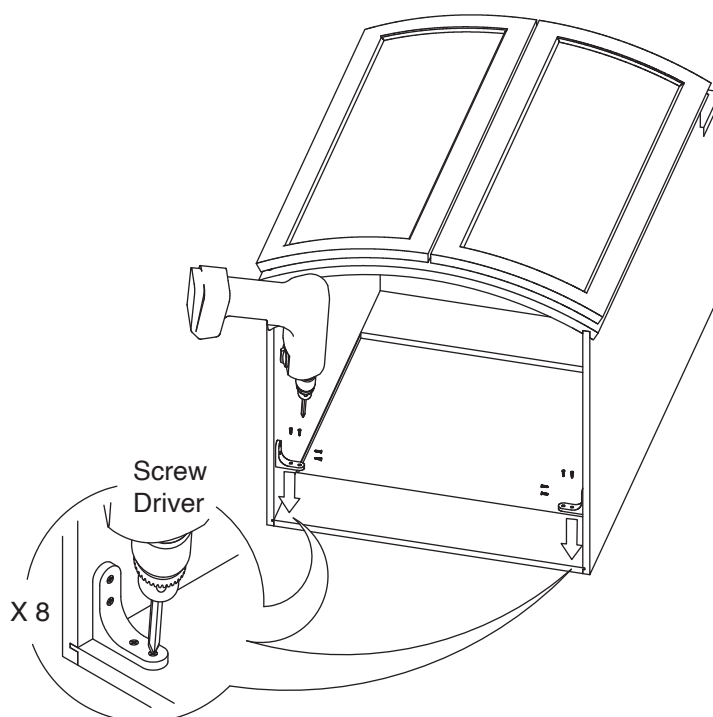

**Step 13:**

