
Assembly Instruction


2020 Edition




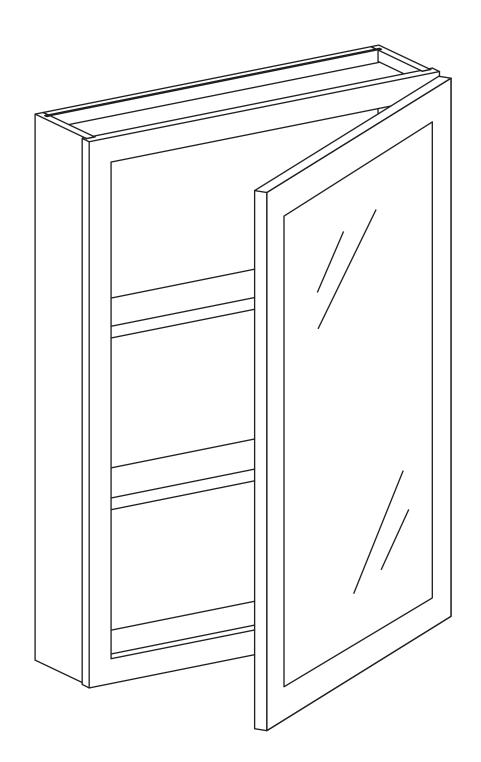

Vanity Mirror Cabinet

Item Code: SVAM24336, SVAM30336

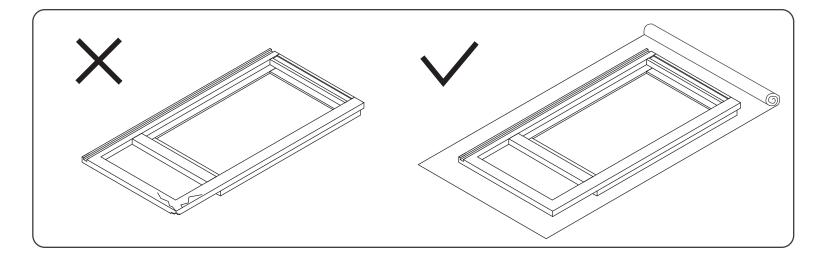

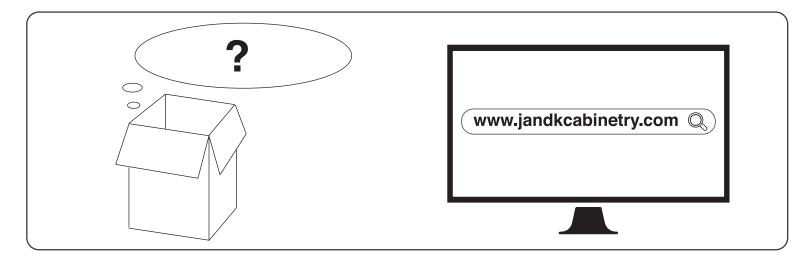


1. Please be careful when opening the box with boxcutter and/or blade.

2. J&K Cabinetry is not responsible for any injuries and/or damages incurred during cabinet assembly.

SERVICE:

During the installation process, if you encounter any problems, please go to our official website: www.jandkcabinetry.com, check the full version assembly instruction or watch the assembly video online.

Included Items:

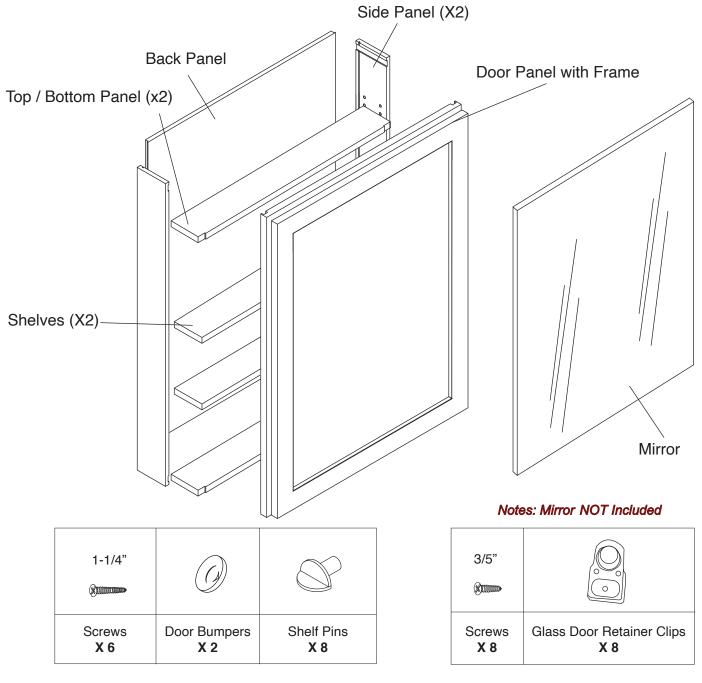

Recommended Tools:





Wood Glue



Compressor





Safety Tools:



Eye Wear






Senco Fastener


Packaging Foam

Copyrights © 2020 J&K International Group, LLC. All Rights Reserved.

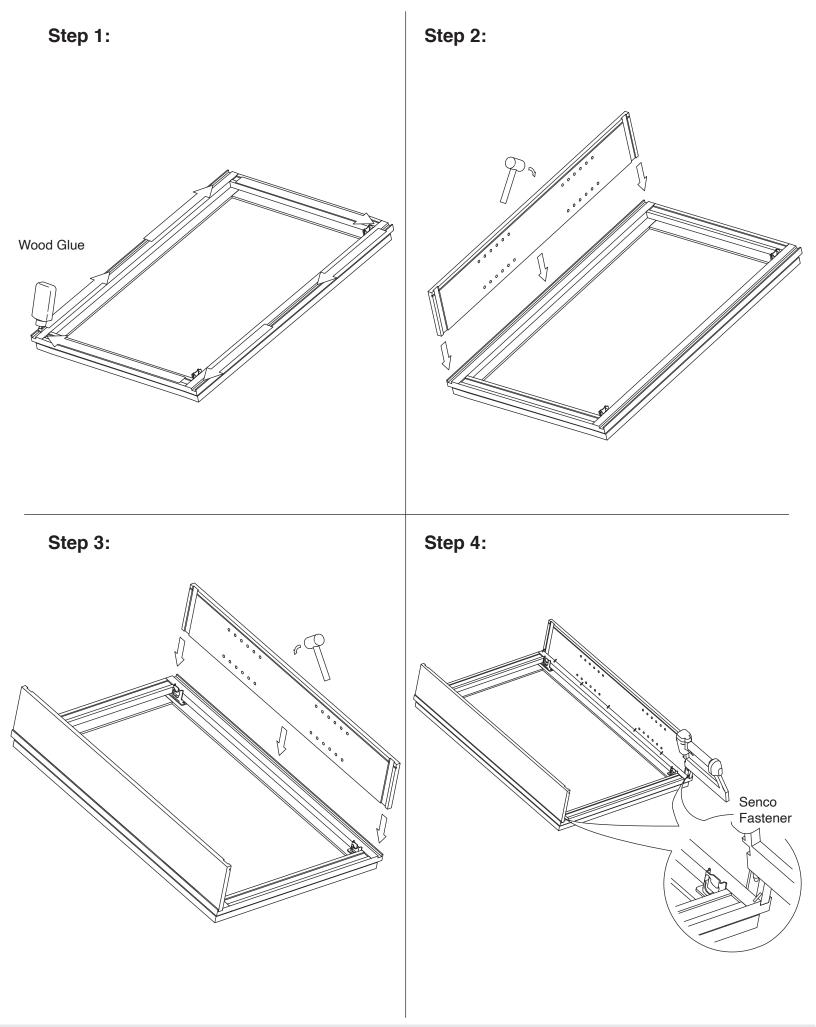


Step 5:

Step 6:

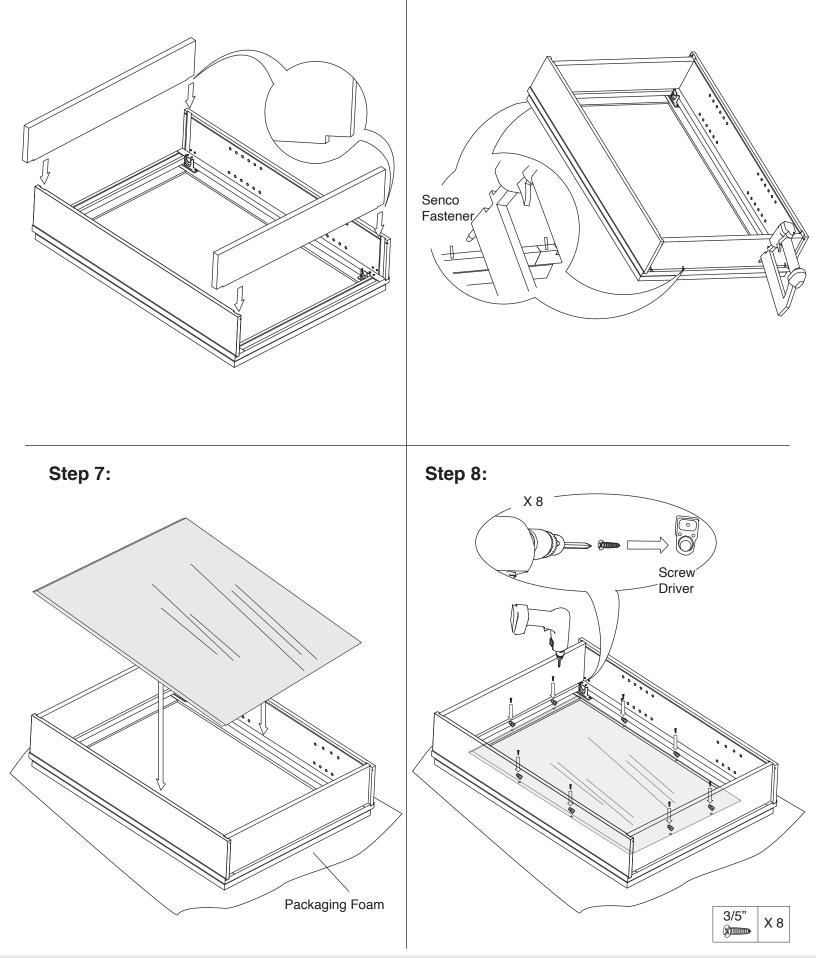



Step 10:

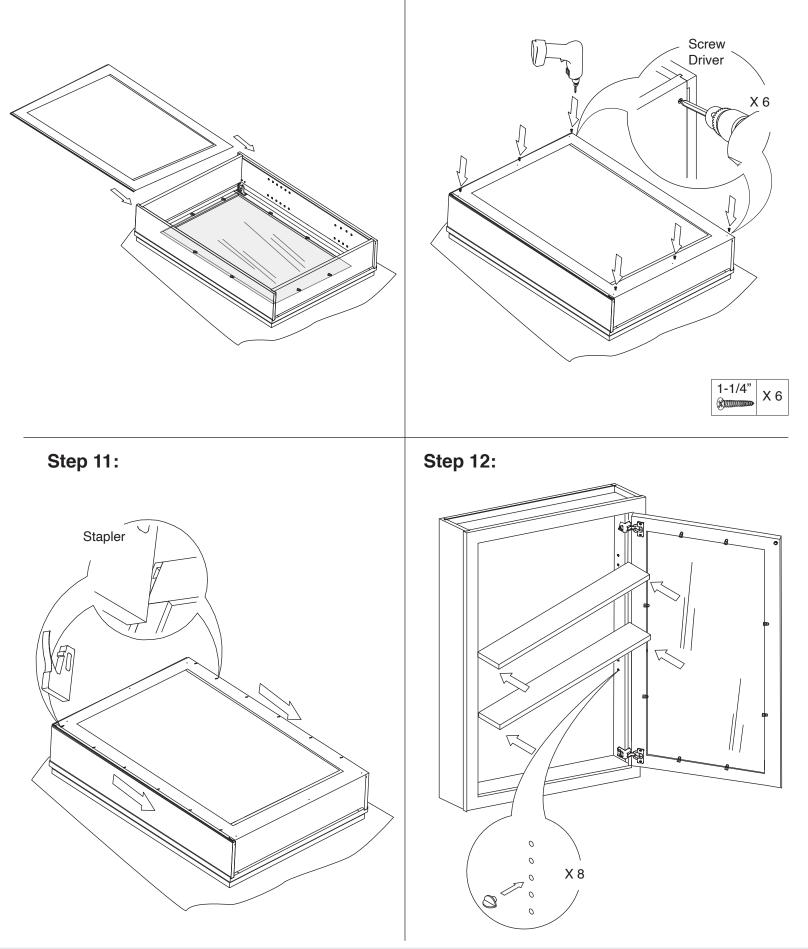

Copyrights © 2020 J&K International Group, LLC. All Rights Reserved.

