
Assembly Instruction






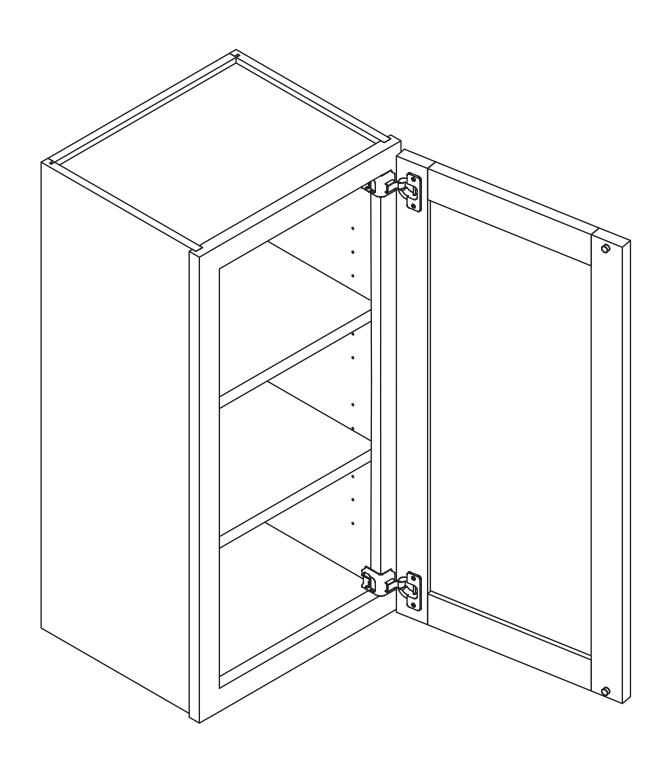

Wall Cabinet

Item Code: W0930, W1230, W1530, W1830, W2130 W0936, W1236, W1536, W1836, W2136

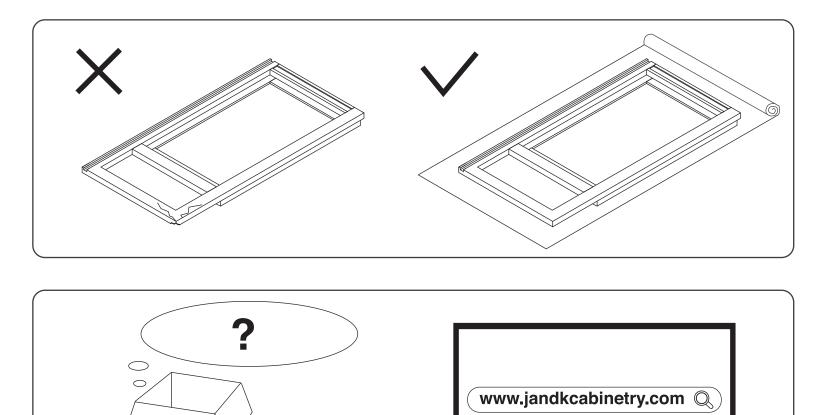



WARNING:


- 1. Please be careful when opening the box with boxcutter and/or blade.
- 2. J&K Cabinetry is not responsible for any injuries and/or damages incurred during cabinet assembly.



SERVICE:

During the installation process, if you encounter any problems, please go to our official website: www.jandkcabinetry.com, check the full version assembly instruction or watch the assembly video online.

Included Items:

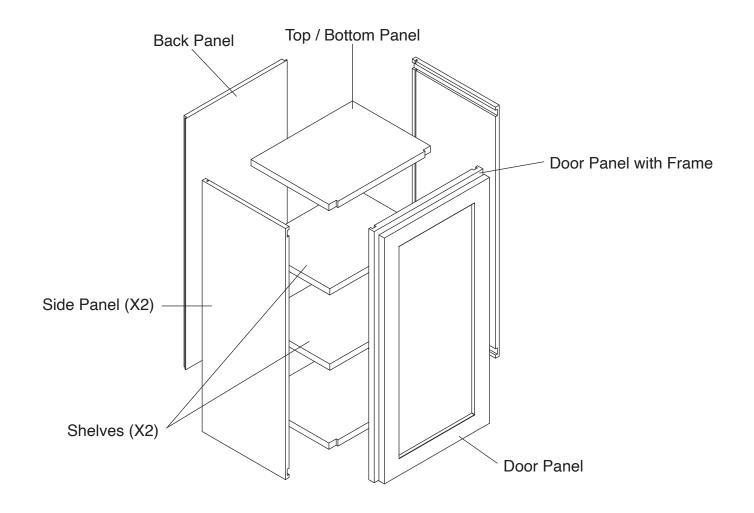

1-3/16"	0	
Screws X 4	Door Bumpers X 2	Shelf Pins X 8

Recommended Tools:











Screw Driver Rubber Mallet

Compressor







Senco Fastener

Safety Tools:




Eye Wear




Gloves


Step 1:

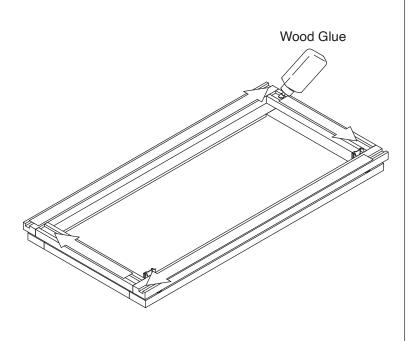


Step 2:

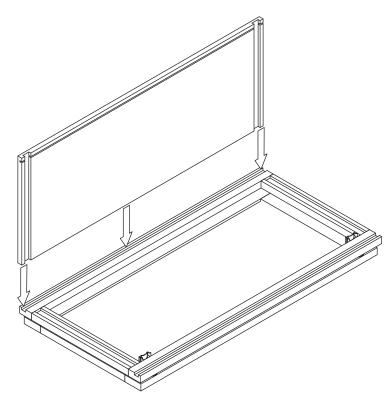

Step 3:

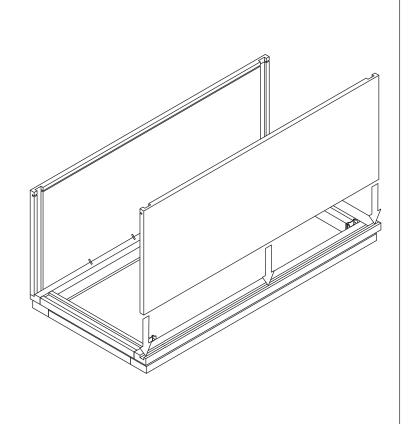

Step 4:

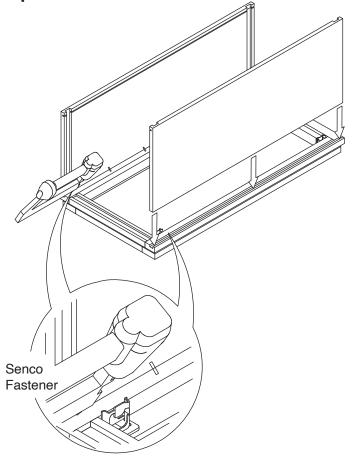

Step 6: Step 5: Step 7: Step 8:

Senco Fastener

Step 9: Step 10: Stapler Screw Driver X 4 1-3/16" X 4 **Step 12:** Step 11: X 8