
Assembly Instruction

2020 Edition




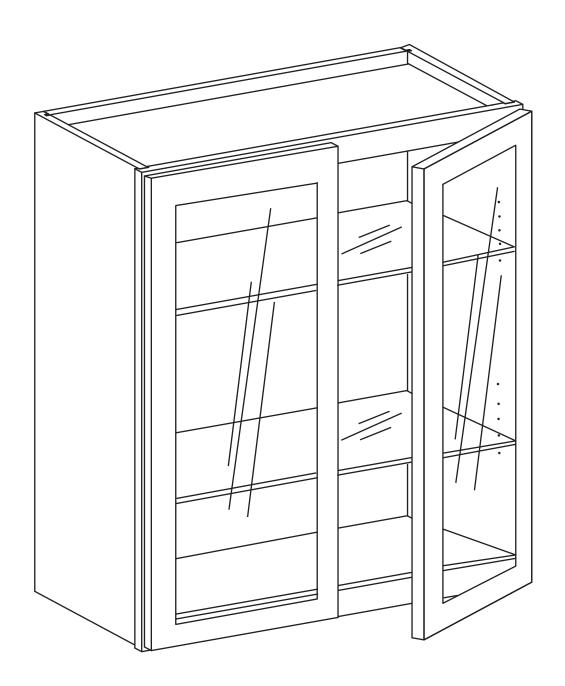


Wall Cabinet Glass Insert Door

Item Code:

WM2430H, WM2730H, WM3030H, WM3330H, WM3630H WM2436H, WM2736H, WM3036H, WM3336H, WM3636H

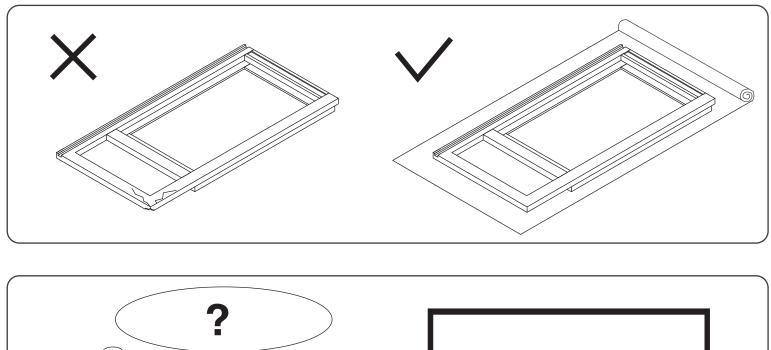

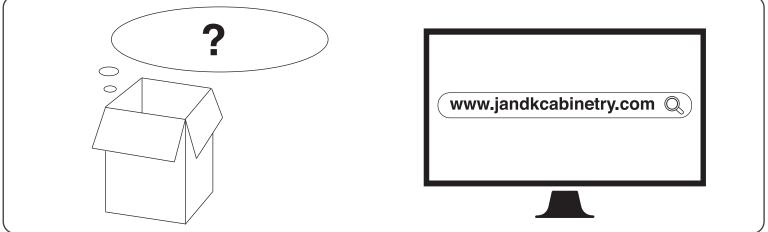



WARNING:


- 1. Please be careful when opening the box with boxcutter and/or blade.
- 2. J&K Cabinetry is not responsible for any injuries and/or damages incurred during cabinet assembly.



SERVICE:

During the installation process, if you encounter any problems, please go to our official website: www.jandkcabinetry.com, check the full version assembly instruction or watch the assembly video online.

Included Items:

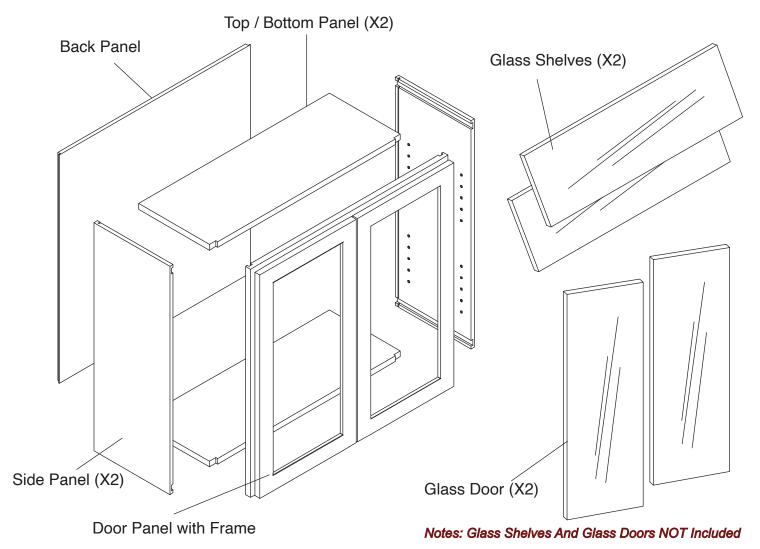

1-3/16"	
Screws X 8	Door Bumpers X 4

3/5"
Screws
X 12

Glass Door Retainer Clips
X 12

Glass Shelf Pins
X 8

Recommended Tools:



Wood Glue

Screw Driver



Rubber Mallet



Compressor









Packaging Foam

Safety Tools:




Eye Wear




Gloves


Step 1:

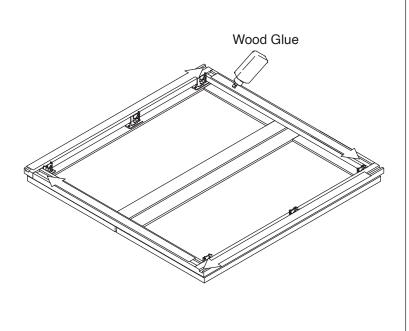


Step 2:

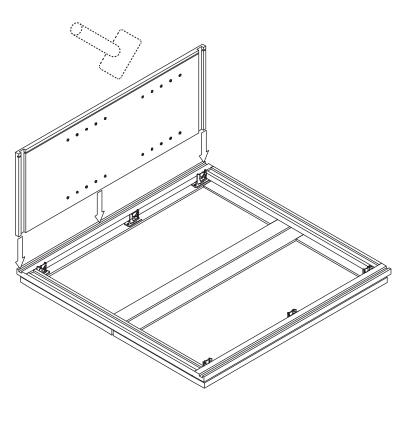


Step 3:

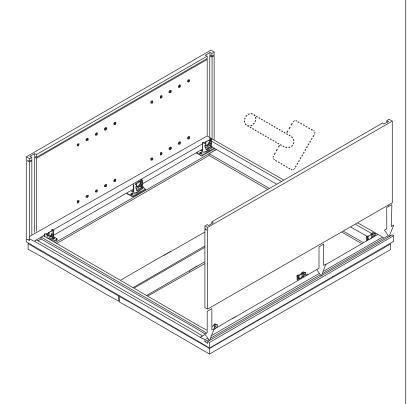


Step 4:

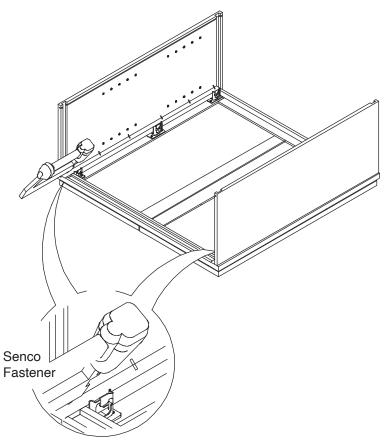


Step 5:

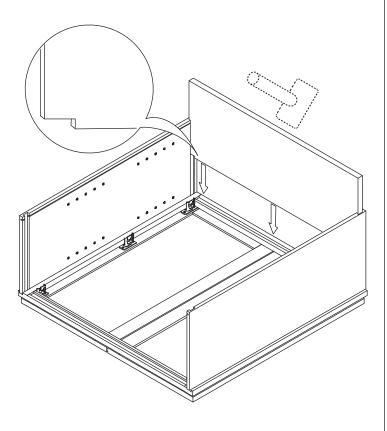


Step 6:

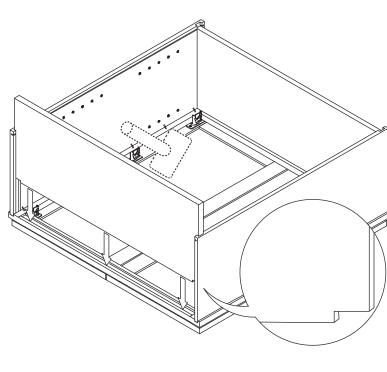


Step 7:

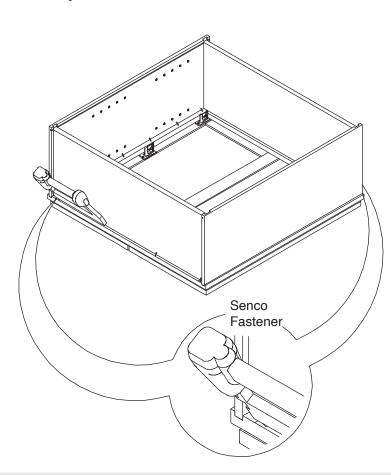


Step 8:

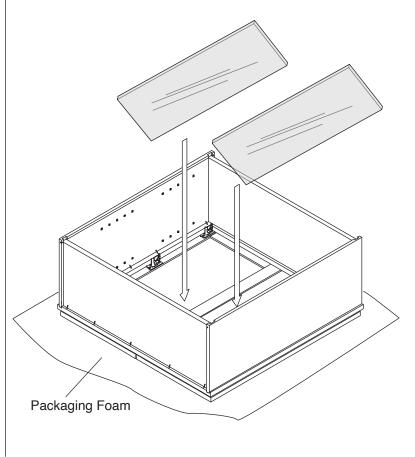


Step 9:

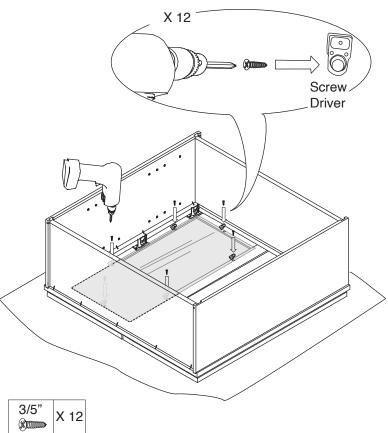


Step 10:

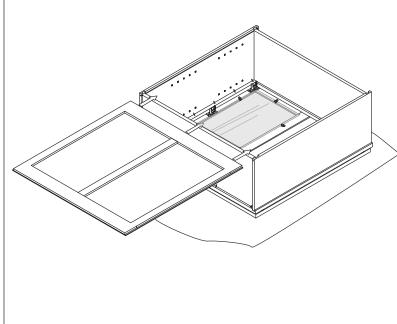


Step 11:

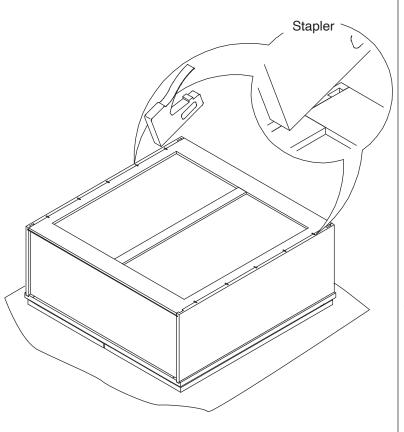


Step 12:

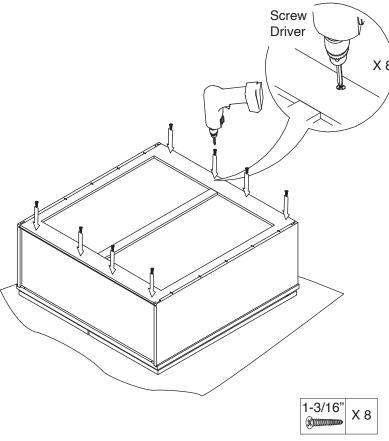

Step 13:

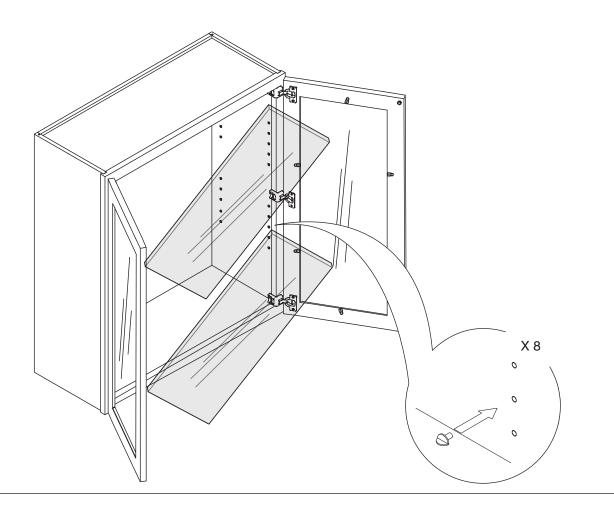

Step 14:

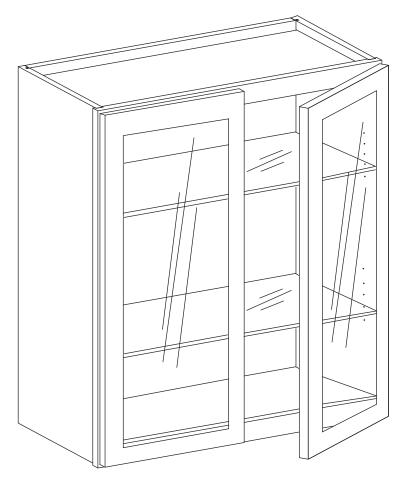

Copyrights © 2020 J&K International Group, LLC. All Rights Reserved.