
Assembly Instruction

2020 Edition




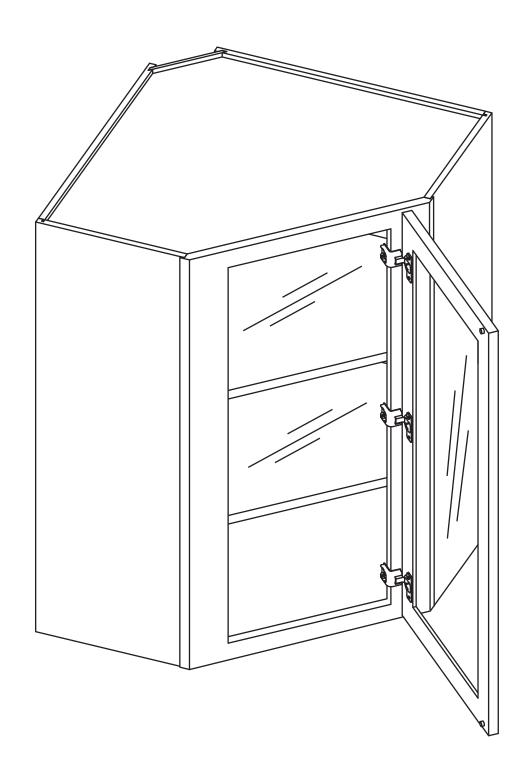

Wall Diagonal Corner Glass Insert Door

Item Code:

WMDC2430H, WMDC2436H, WMDC273615H

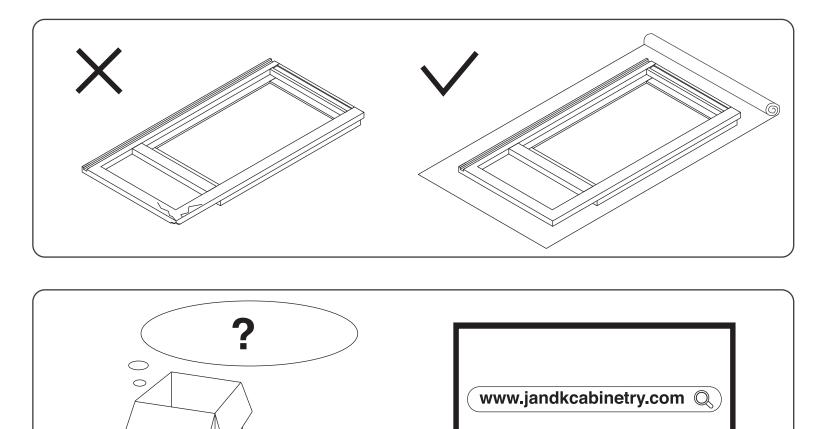




- 1. Please be careful when opening the box with boxcutter and/or blade.
- 2. J&K Cabinetry is not responsible for any injuries and/or damages incurred during cabinet assembly.



During the installation process, if you encounter any problems, please go to our official website: www.jandkcabinetry.com, check the full version assembly instruction or watch the assembly video online.

Included Items:

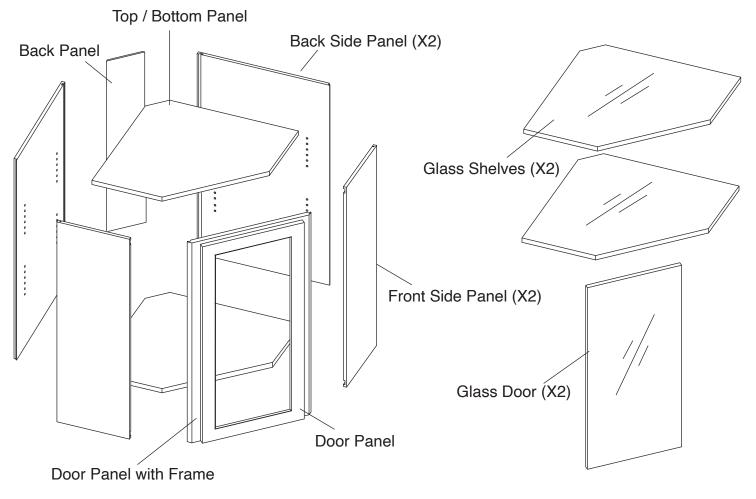

Notes: Glass Shelves And Glass Doors NOT Included

(0 ° ° ° ° ° ° ° ° ° ° ° ° ° ° ° ° ° ° °	5/8"	1-1/4"	0	3/5"		
137° Brackets X 6	Screws X 24	Screws X 12	Door Bumpers X 2	Screws X 6	Glass Door Retainer Clips X 6	Glass Shelf Pins X 8

Recommended Tools:




Safety Tools:







Gloves

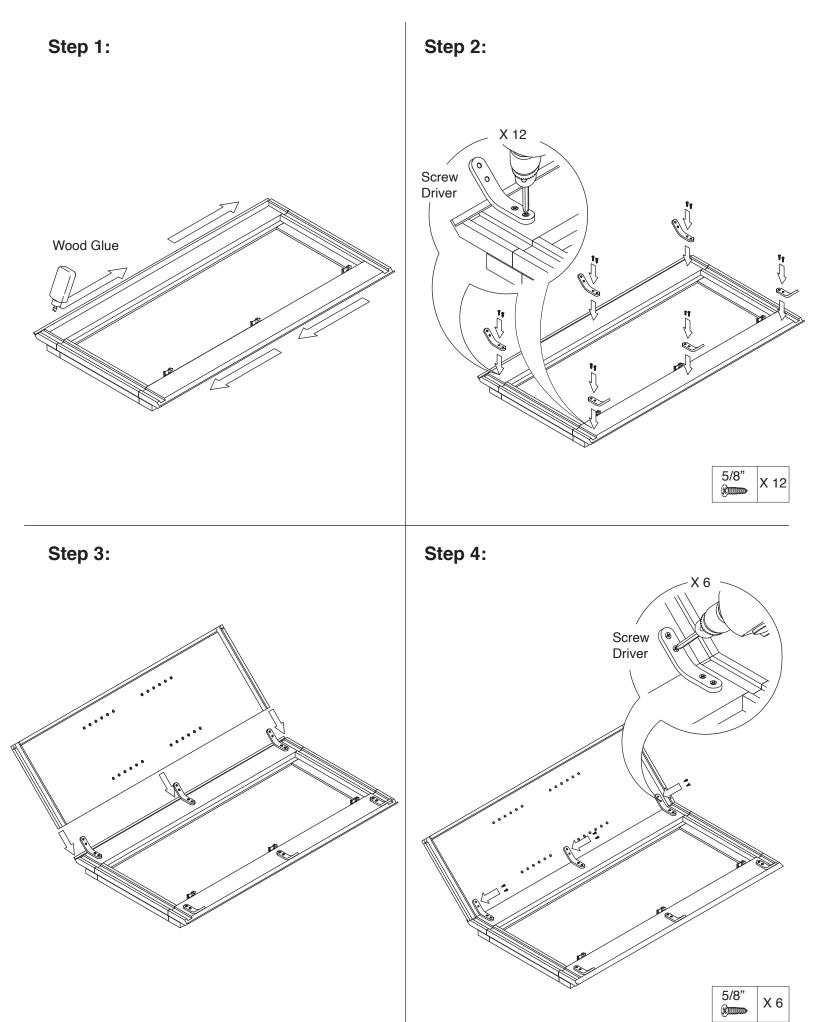


Step 5:

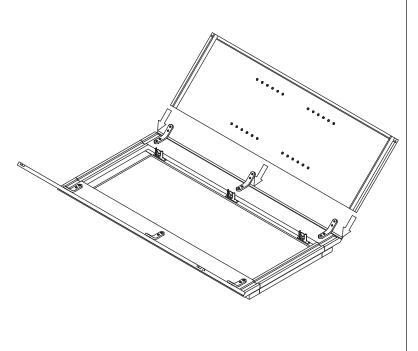


Step 6:

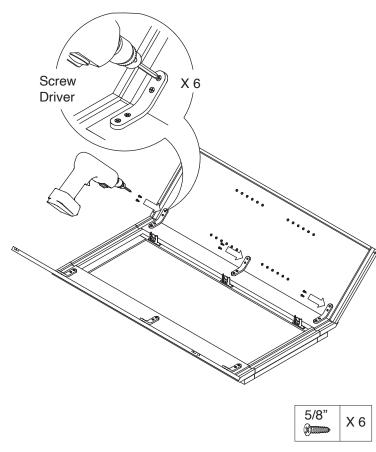


Step 7:

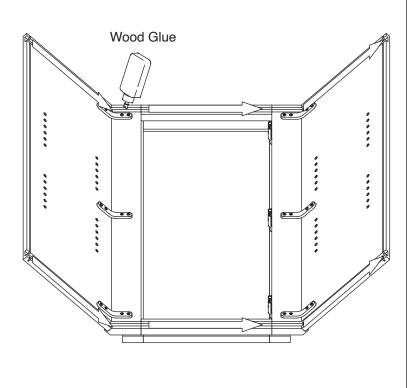


Step 8:

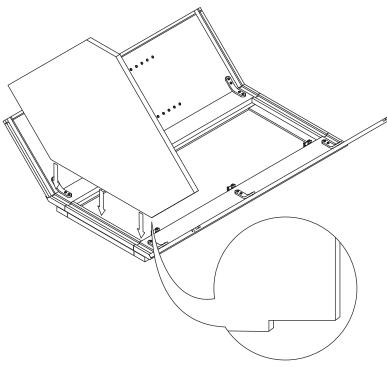


Step 9:

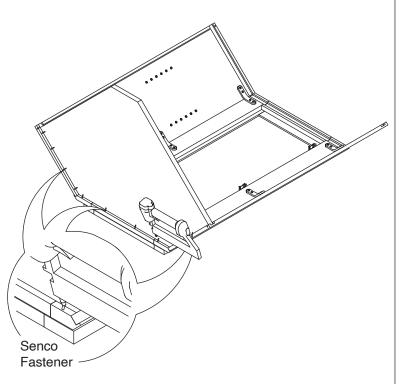


Step 10:

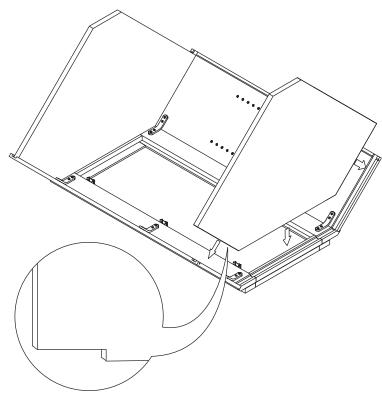


Step 11:

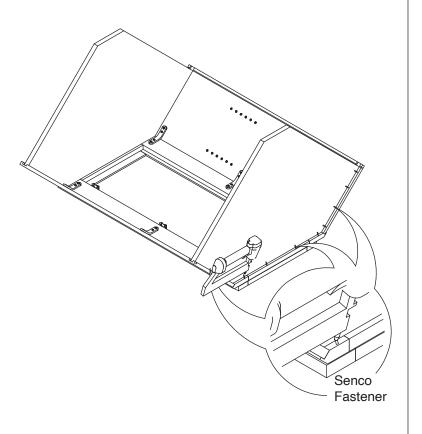


Step 12:

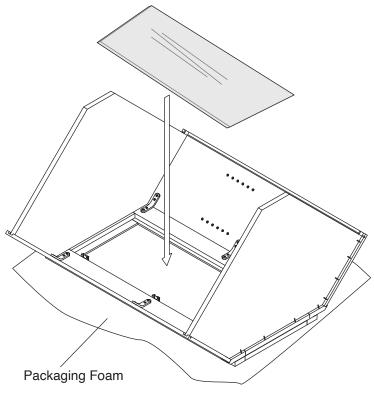


Step 13:

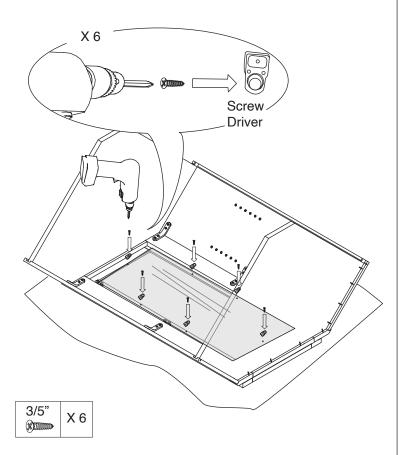


Step 14:

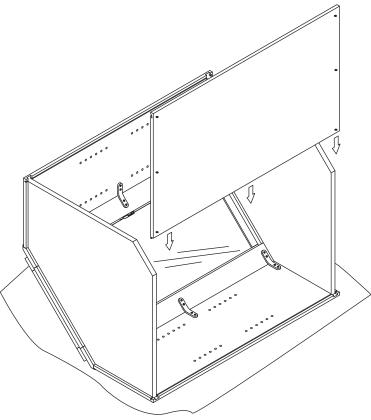


Step 15:

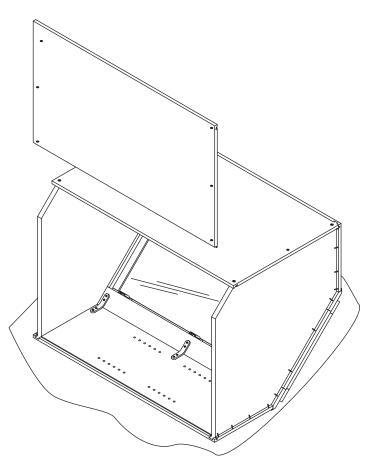


Step 16:

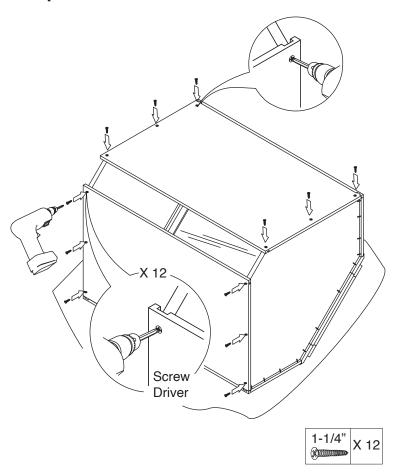


Step 17:

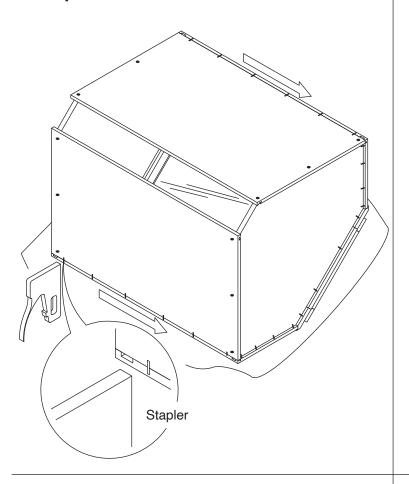

Step 18:

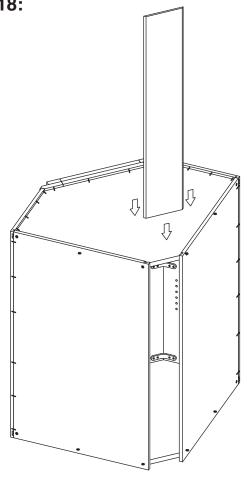

Step 19:

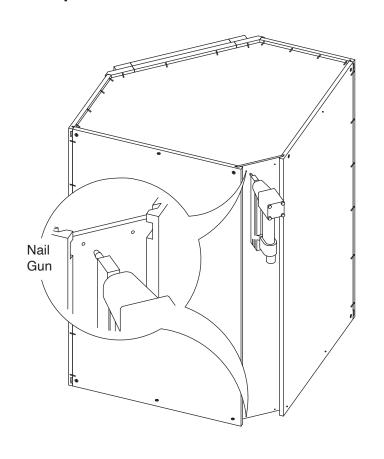

Step 20:

